WD8704CJ(A/F/G/H/Z)
WD8702CJ(A/F/G/H/Z)
WD8704DJ(A/F/G/H/Z)
WD8702DJ(A/F/G/H/Z)
WD8704HJ(A/F/G/H/Z)
WD8702HJ(A/F/G/H/Z)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register

SAMSUNG

WD8704DJ-02696G_EN.indd 1 2009-12-28 ¿ÀÈÄ 5:27:09

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Silver Wash - Silver Wash Health System(selected model only)**

  The winning combination! Samsung's silver technology combines the sanitizing effect of silver with state-of-the-art science for the ultimate in clean. Two plates of pure silver are converted into silver ions through electrolysis. Even in cold, bleach-less water, the silver particles remove of odor causing bacteria for a "super clean" wash. So washing in cold water is energy efficient and better for your clothes.
  The Silver plates carry a warranty of ten years for 2 times run a week and can easily be replaced by a Service Technician if needed.

- **Washing to drying with one button**

  Enjoy convenient non stop washing and drying managing. 4 different special drying programs can be selected to perform the whole wash cycle including the drying cycle using one button.
  - Cupboard(standard program), Low temp drying, Iron,Time Drying (30min ~ 270mins)
    Those drying programs also can be operated independently of washing programs.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Delay Start**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Quick Wash**

  No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

- **Delicates & Hand Wash Program**

  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  Our truly innovative Ceramic Heater is twice as durable as regular heaters.
  That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

WD8704DJ-02696G_EN.indd 2 2009-12-28 ¿ÀÈÄ 5:27:09

- **Air Wash**

  The Air Wash system Deodorizations unpleasant smells and sanitizes the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique air-washing mechanism.
  - Air-washable : Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
  - Not applicable : leather, silk, velvet, electric blankets, other stained laundry

- **Digital Graphic Display**

  The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

- **Direct Drive Motor**

  As the drum does not utilize belts or gears, vibrations are reduced significantly. This feature ensures that your washer machine is quieter and more durable.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 30 tells you what to do if something goes wrong with your new washing machine.

WD8704DJ-02696G_EN.indd 3 2009-12-28 ¿ÀÈÄ 5:27:09

safety information

Congratulations on your new Samsung ActivFresh™ washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.
Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠ **CAUTION**	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WD8704DJ-02696G_EN.indd 4 2009-12-28 ¿ÀÈÄ 5:27:11

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WD8704DJ-02696G_EN.indd 5 2009-12-28 ¿ÀÈÄ 5:27:11

safety information

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220V/50Hz/15A wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature
- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WD8704DJ-02696G_EN.indd 6 2009-12-28 ¿ÀÈÄ 5:27:11

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, cut the water supply and power immediately and contact your nearest service centre.

- Do not tough the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WD8704DJ-02696G_EN.indd 7 2009-12-28 ¿ÀÈÄ 5:27:11

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

When the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WD8704DJ-02696G_EN.indd 8 2009-12-28 ¿ÀÈÄ 5:27:11

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.
Open the faucet slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).

- If the door is not closed completely, it may result in water leakage.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

To reduce the risk of fire or explosion:

- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.

WD8704DJ-02696G_EN.indd 9 2009-12-28 ¿ÀÈÄ 5:27:11

safety information

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device.Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

WD8704DJ-02696G_EN.indd 10 2009-12-28 ¿ÀÈÄ 5:27:11

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discoloration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WD8704DJ-02696G_EN.indd 11 2009-12-28 ¿ÀÈÄ 5:27:12

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
24 Child lock
24 Sound off
24 Delay Start
24 Drain Only Fuction
25 Air Wash
26 Using dry course
27 Washing clothes using the cycle selector
27 Washing clothes manually
28 Laundry guidelines
29 Detergent and additives information
29 Which detergent to use
29 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 30

30 Draining the washing machine in an emergency
30 Cleaning the exterior
31 Cleaning the detergent drawer and drawer recess
31 Cleaning the debris filter
32 Cleaning the water hose mesh filter
32 Repairing a frozen washing machine
32 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 33

33 Check these points if your washing machine...
34 Information codes

CYCLE CHART 35

35 Cycle chart

APPENDIX 36

36 Fabric care chart
36 Protecting the environment
36 Declaration of conformity

WD8704DJ-02696G_EN.indd 12 2009-12-28 ¿ÀÈÄ 5:27:12

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

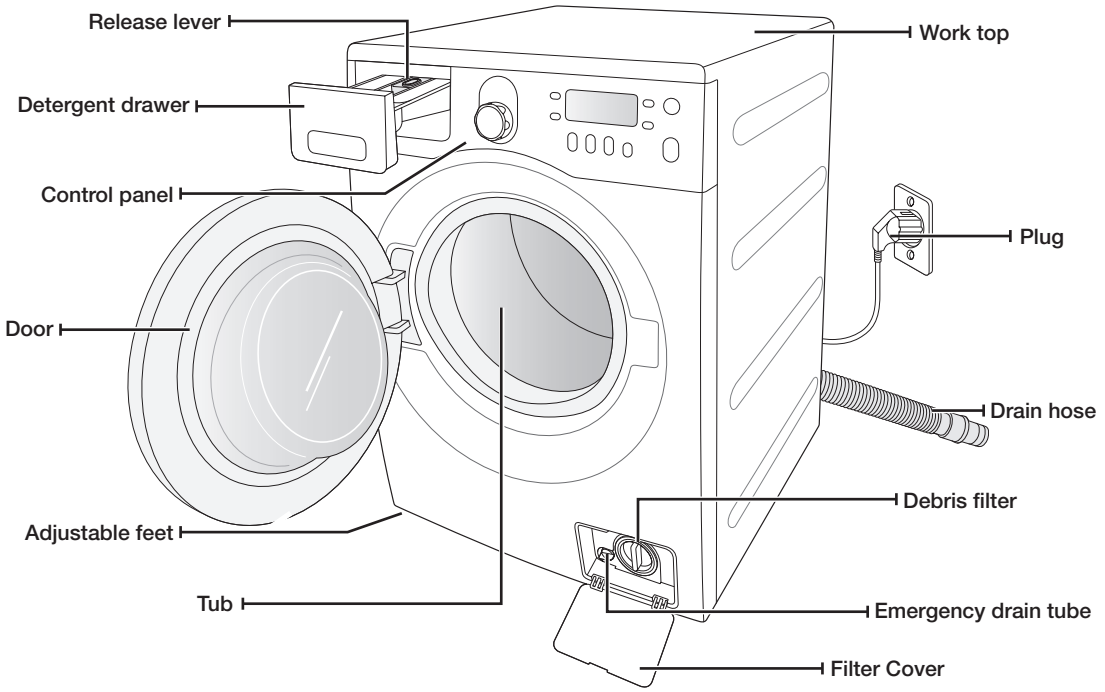

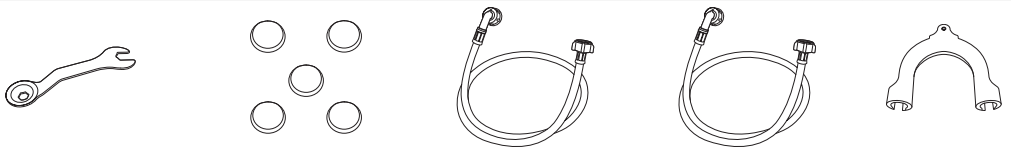

Spanner	Bolt hole covers	Cold	Hot (Selected Model)	Hose guide
		Water supply hose		

WD8704DJ-02696G_EN.indd 13 2009-12-28 ¿ÀÈÄ 5:27:13

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD8704DJ-02696G_EN.indd 14 2009-12-28 ¿ÀÈÄ 5:27:13

Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD8704DJ-02696G_EN.indd 15 2009-12-28 ¿ÀÈÄ 5:27:13

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

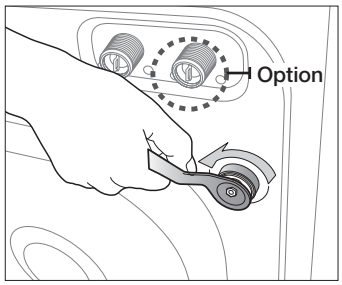

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

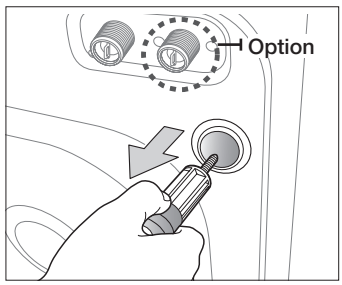

3. Fill the holes with the supplied plastic covers.

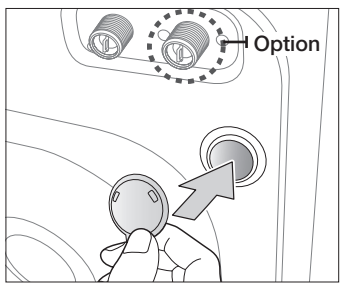

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WD8704DJ-02696G_EN.indd 16 2009-12-28 ¿ÀÈÄ 5:27:14

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

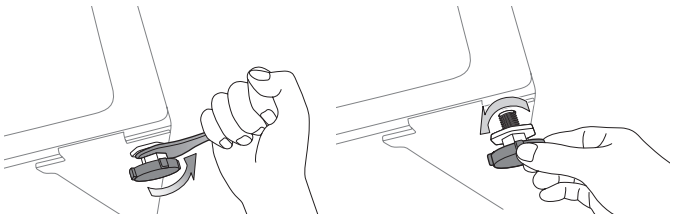

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

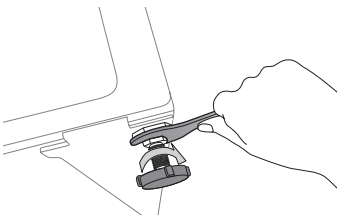

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

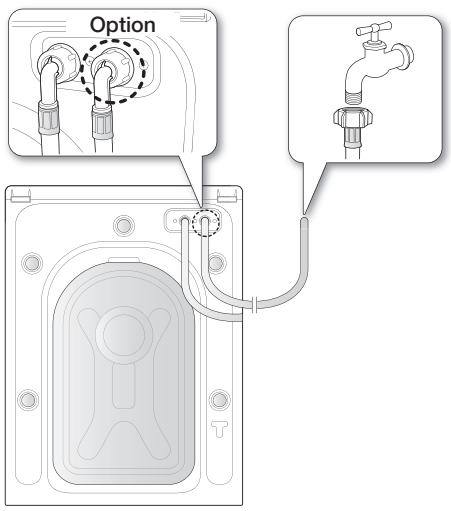

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD8704DJ-02696G_EN.indd 17 2009-12-28 ¿ÀÈÄ 5:27:15

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

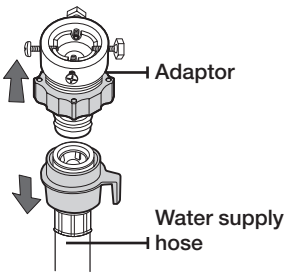

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

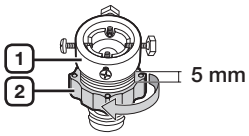

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

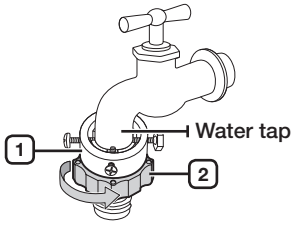

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

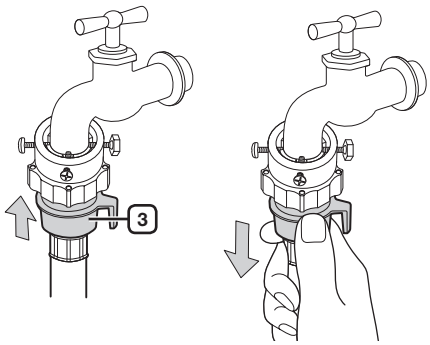

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

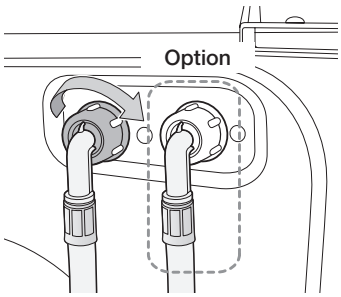

WD8704DJ-02696G_EN.indd 18 2009-12-28 ¿ÀÈÄ 5:27:16

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

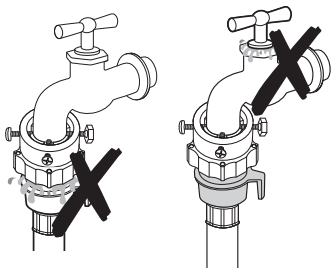

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

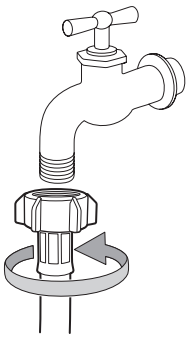

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WD8704DJ-02696G_EN.indd 19 2009-12-28 ¿ÀÈÄ 5:27:16

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

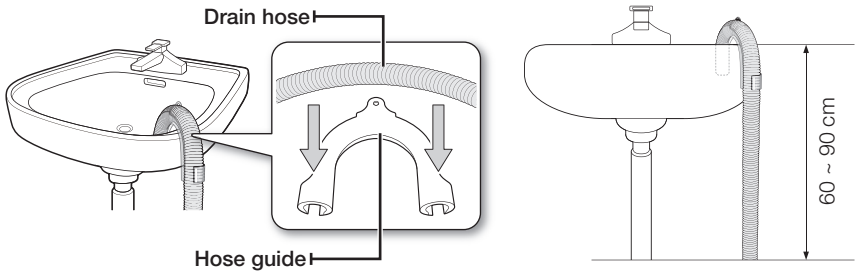

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 10.)

WD8704DJ-02696G_EN.indd 20 2009-12-28 ¿ÀÈÄ 5:27:17

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

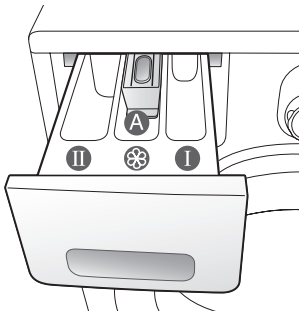

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 28.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD8704DJ-02696G_EN.indd 21 2009-12-28 ¿ÀÈÄ 5:27:19

washing a load of laundry

USING THE CONTROL PANEL

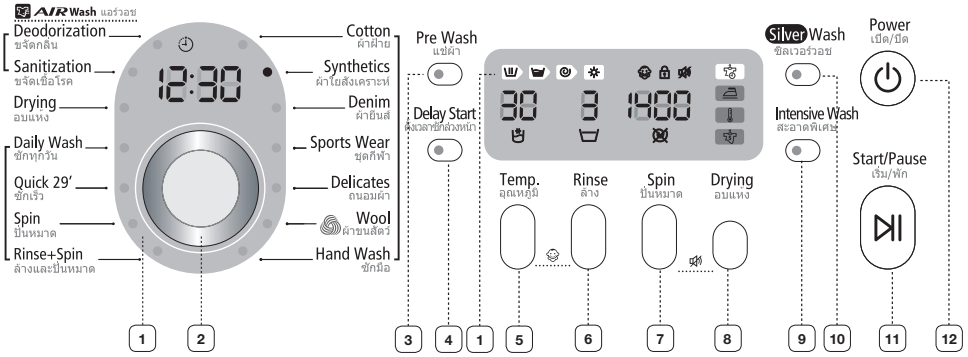

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector". (see page 27) **Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel. **Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Handwash** - A very light wash cycle as gentle as a hand wash. **Air Wash** - This course is useful for removing bad odors. Turning the Cycle Selector cycles through the following operating modes. (Deodorization → Sanitization) • Deodorization - Reduces bad smells from the laundry • Sanitization - Deodorize and sanitize the laundry by stronger air wash action with higher temp. **Drying** - Select to dry laundry automatically by detecting the amount and weight of the laundry. **Daily Wash** - Use for everyday items such as underwear and shirts. **Quick 29'** - For lightly soiled garments that you require quickly.

WD8704DJ-02696G_EN.indd 22 2009-12-28 ¿ÀÈÄ 5:27:19

	Spin - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load. **Drain Only** - Turn the **Cycle Selector** to the Spin position, press the **Spin** button, and then press the **Start/Pause** button to drain the water.
3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Sports Wear, Daily Wash.
4 **DELAY START SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay Start options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WD8704 | , , 400, 800, 1200, 1400 rpm WD8702 | , , 400, 800, 1000, 1200 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold " -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **DRYING BUTTON**	Pressing the button cycles through the following options. Cup Board → Low Temp → Iron → Time Dry (30min. → 1:00min. → 1:30min. → 2:00min. → 2:30min. → 3:00min. → 3:30min. → 4:00min. → 4:30min.) → Cup Board "Cup Board " - Use this cycle to dry loads such as cotton, underwear, and linen. "Low Temp " - This cycle protect heat-sensitive items at a low drying temperature. "Iron " - Finishes the dry cycle in a moist state appropriate for Ironing. "Time Dry " -Dry the laundry for the specified period of time. • You must avoid washing laundry that may not be dried as it may be deformed even at low temperatures. • The Cup Board, Low Temp, Iron and Time Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry.
9 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
10 **SILVER WASH SELECTION BUTTON**	Silver Wash water is supplied during the wash cycle as well as during the last rinse cycle, removing bacteria as well as giving protection from bacterial growth for up to one month.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD8704DJ-02696G_EN.indd 23 2009-12-28 ¿ÀÈÄ 5:27:21

washing a load of laundry

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

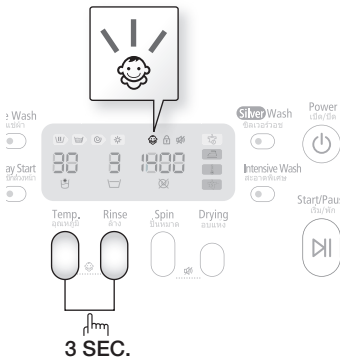

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Drying** Mode buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

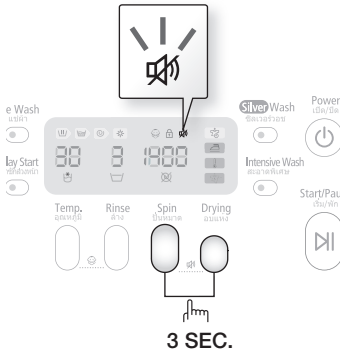

Delay Start

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay Start** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay Start" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay Start function, press the **Power** button and then turn the washing machine on again.

Drain Only Fuction

When you want just drain water from washing machine, follow directions below.

1. Press the **Power** button
2. Turn the Cycle Selector to the Spin positio.
3. Press the **Spin** button 1 times until rpm sign is off.
4. Then "1" shows up on time display in center.
5. Press the **Start/Pause** button.

WD8704DJ-02696G_EN.indd 24 2009-12-28 ¿ÀÈÄ 5:27:22

Air Wash

Air Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton or jumpers, sweaters and suits. [Two items or less (less than 1 kg)]

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Select **Air Wash** by turning the **Cycle Selector**.
   - Each time the button is pressed, the operating mode cycles through the following sequence: Deodorization, Sanitization ...

MODE	CYCLE TIME
Deodorization	29 min
Sanitization	59 min

   - When one of these options has been selected, no other button can be selected and you can only select the Delay Start time from between 3:00 – 19:00.
4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **Air Wash** cannot be selected. Drain the water and select **Air Wash**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid Air Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WD8704DJ-02696G_EN.indd 25 2009-12-28 ¿ÀÈÄ 5:27:23

washing a load of laundry

USING DRY COURSE

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothe of 3.5kg.

1. Open the door, put in the clothes and close the door again.
2. Press the **Power** button and then press the **Drying** button.
   : The standard course will be selected automatically.
   Drying is availably selected only at the courses such as cotton, synthetics, Denim and sports wear.
3. Select **Drying** button as follows.
   Drying Programs

   - Every press of this button will select drying type repeatedly in the following order: Cup Board → Low Temp → Iron → Time Dry (30min. →1:00min. → 1:30min. → 2:00min. → 2:30min. → 3:00min. → 3:30min. → 4:00min. → 4:30min.) → Cup Board

Drying Type		Information	Max Load	Time (Max Load)
Auto Drying	Cupboard( )	Standard: Dries the laundry.	3.5 kg	160min.
	Low Temp.( )	Dries the laundry at a low temperature to protect the texture of the laundry.	2.0 kg	160min.
	Iron( )	For leaving items partially damp so that it can be easily ironed	2.0 kg	30min.
Time Drying( )		You can select the appropriate drying time depending on the texture, quantity, and moisture.	3.5 kg	270min.

   - It automatically displays Drying Time by sensing the weight of clothes before drying for increasing the drying effect.
   - For laundry weighing less than 3.5kg, use the Auto Dry. For laundry that weighs more, please use the Time Dry.
   - If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
   - When using the drying cycle, check if the water supply valve is opened.
4. Put suitable amount of detergent and fiber softener in the detergent tray and close it again.
5. Press **Start/Pause** button.
   : It automatically performs an optimal function from washing to drying.
   - The selected course can't be altered after the start of drying.
   - If you select Drying function, the intensity of SPIN will be set up as High in default for increasing the drying effect.
   - If cold water is not supplied, drying will not be performed.
   - If you do not take out clothes from the tub after the end of drying, a function of wrinkle protection will be performed for about 30 minutes with the display of [End]. In order to take out the clothes: press firstly Start/Pause or Power button and take them out.
   - In case you wish to dry after hand washing, select both Spin and Dry at the same time.

WD8704DJ-02696G_EN.indd 26 2009-12-28 ¿ÀÈÄ 5:27:23

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Sports Wear, Daily Wash cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Sports Wear, Delicates, Wool, Hand Wash, Daily Wash, Quick 29'. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (⊗ : No Spin, ⎓ : Rinse Hold)
10. Press the **Delay Start** button repeatedly to cycle through the available Delay Start options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

WD8704DJ-02696G_EN.indd 27 2009-12-28 ¿ÀÈÄ 5:27:23

washing a load of laundry

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD8704/ WD8702
Cotton - average/lightly soiled - heavily soiled	7.0 kg
Synthetics	3.0 kg
Denim	3.0 kg
Sports Wear	2.5 kg
Delicates	2.5 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.

WD8704DJ-02696G_EN.indd 28 2009-12-28 ¿ÀÈÄ 5:27:24

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

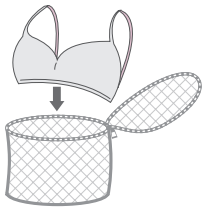

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.
4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

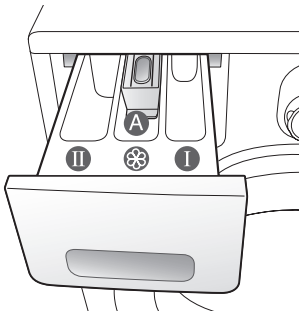

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

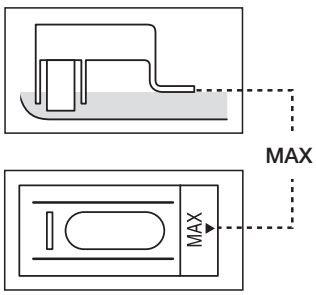

WD8704DJ-02696G_EN.indd 29 2009-12-28 ¿ÀÈÄ 5:27:24

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

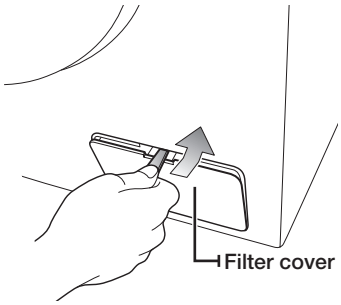

3. Unscrew the emergency drain cap by turning it to the left.

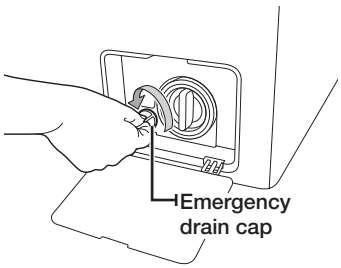

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.
6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

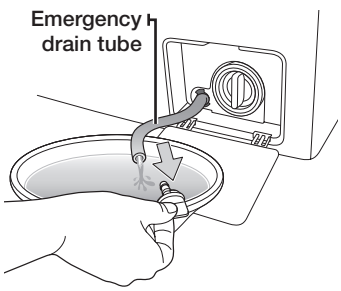

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WD8704DJ-02696G_EN.indd 30 2009-12-28 ¿ÀÈÄ 5:27:25

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the rinse cap from the detergent drawer.

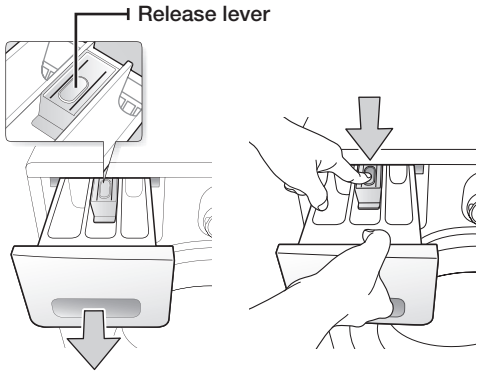

3. Wash all parts under running water.

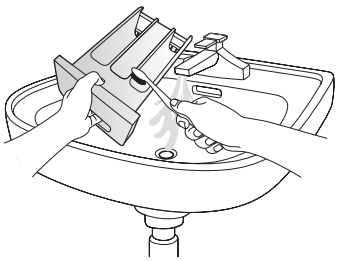

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

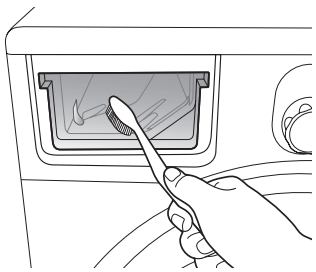

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

1. Open the filter cover by using a key or coin.
2. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
3. Unscrew the debris filter cap.

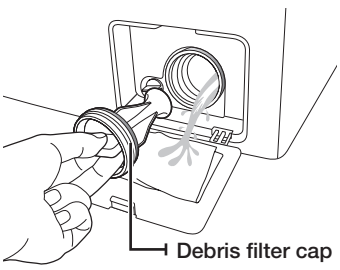

4. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
5. Replace the debris filter cap.
6. Replace the filter cover.

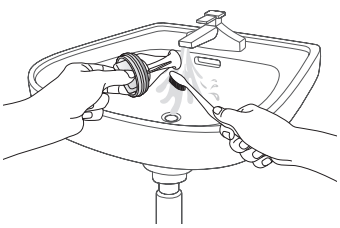

WD8704DJ-02696G_EN.indd 31 2009-12-28 ¿ÀÈÄ 5:27:26

cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick 29' cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WD8704DJ-02696G_EN.indd 32 2009-12-28 ¿ÀÈÄ 5:27:26

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WD8704DJ-02696G_EN.indd 33 2009-12-28 ¿ÀÈÄ 5:27:27

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Hot	• It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until “**Hot**” indication disappeared.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD8704DJ-02696G_EN.indd 34 2009-12-28 ¿ÀÈÄ 5:27:27

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Silver wash	Max Temp (˚C)
	WD8704/ WD8702	Pre-wash	wash	Softener		
Cotton	7.0	●	yes	●	●	95
Synthetics	3.0	●	yes	●	●	60
Denim	3.0	●	yes	●	●	60
Sports Wear	2.5	●	yes	●	●	60
Delicates	2.5	-	yes	-	-	40
Wool	2.0	-	yes	-	-	40
Handwash	2.0	-	yes	●	-	40
Deodorization	1.0	-	-	-	-	-
Sanitization	1.0	-	-	-	-	-
Drying	3.5	-	-	-	-	-
Daily Wash	3.0	●	yes	●	●	60
Quick 29’	3.0	-	yes	●	-	60

PROGRAM	Spin Speed(MAX) rpm		Delay Start	Cycle time (min)
	WD8704	WD8702		
Cotton	1400	1200	●	120
Synthetics	1200	1200	●	90
Denim	800	800	●	78
Sports Wear	1200	1200	●	72
Delicates	800	800	●	50
Wool	800	800	●	38
Handwash	400	400	●	31
Deodorization	-	-	●	29
Sanitization	-	-	●	59
Drying	-	-	●	160
Daily Wash	1200	1200	●	70
Quick 29’	1400	1200	●	29

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WD8704DJ-02696G_EN.indd 35 2009-12-28 ¿ÀÈÄ 5:27:27

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WD8704DJ-02696G_EN.indd 36 2009-12-28 ¿ÀÈÄ 5:27:31

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
			W598mm X D600mm X H844mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			56 ℓ	
NET WEIGHT			WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
			70 kg	
WASH AND SPIN CAPACITY			7.0 kg [DRY LAUNDRY]	
DRY CAPACITY			3.5 kg	
POWER CONSUMPTION	MODEL		WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
	WASHING		220 V	150 W
			240 V	150 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	DRYING		230V	1600W
	SPIN	MODEL	WD8704CJ/ WD8704DJ/ WD8704HJ	WD8702CJ/ WD8702DJ/ WD8702HJ
		230V	300 W	250 W
	PUMPING		34 W	
PACKAGE WEIGHT	MODEL		WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
	PAPER		2.5 kg	
	PLASTIC		2.5 kg	
SPIN REVOLUTIONS	MODEL		WD8704CJ/ WD8704DJ/ WD8704HJ	WD8702CJ/ WD8702DJ/ WD8702HJ
	rpm		1400	1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WD8704DJ-02696G_EN.indd 37 2009-12-28 ¿ÀÈÄ 5:27:31

memo

memo

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th

Code No. DC68-02696G_EN

WD8704CJ(A/F/G/H/Z)
WD8702CJ(A/F/G/H/Z)
WD8704DJ(A/F/G/H/Z)
WD8702DJ(A/F/G/H/Z)
WD8704HJ(A/F/G/H/Z)
WD8702HJ(A/F/G/H/Z)

เครื่องซักผ้า

คู่มือผู้ใช้

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung
ในการรับบริการที่ครบครันยิ่งขึ้น โปรดลงทะเบียนผลิตภัณฑ์ได้ที่

www.samsung.com/register

SAMSUNG

WD8704DJ-02696G_TH_CS3.indd 1 2009-12-29 12:08:46

คุณสมบัติของเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ

เครื่องซักผ้าเครื่องใหม่ของคุณจะเปลี่ยนความรู้สึกในการซักผ้าของคุณอย่างสิ้นเชิง ตั้งแต่ความจุที่เหนือกว่าไปจนถึงประสิทธิภาพในการใช้พลังงาน เครื่องซักผ้า Samsung มีคุณสมบัติเพียบพร้อมที่จะทำให้งานหนักกลายเป็นเรื่องง่ายสำหรับคุณ

- **โปรแกรมยับยั้งเชื้อโรค - ระบบยับยั้งเชื้อโรคเพื่อสุขภาพ (เฉพาะบางรุ่น)**

  ส่วนผสมที่ลงตัว! เทคโนโลยีซิลเวอร์ของ Samsung ผสานรวมประสิทธิภาพในการทำความสะอาดของธาตุเงินกับวิทยาศาสตร์อันก้าวหน้า เพื่อการซักผ้าที่สะอาดเหนือกว่า เพลทธาตุเงินบริสุทธิ์สองเพลทจะถูกเปลี่ยนเป็นประจุเงินผ่านกระบวนการอิเล็กโตรไลสิส แม้กระทั่งในน้ำเย็นที่ไม่มีสารฟอก อนุภาคเงินจะขจัดแบคทีเรียที่เป็นสาเหตุของกลิ่นอับ ทำให้ผ้าของคุณ "สะอาดยิ่งกว่า" ดังนั้น การซักผ้าในน้ำเย็นจะช่วยประหยัดพลังงานและดีต่อผ้าของคุณ
  แผ่นโลหะเงินนี้มีการรับประกันถึงสิบปี สำหรับการทำงาน 2 ครั้งต่อสัปดาห์ และสามารถเปลี่ยนทดแทนโดยช่างซ่อมบำรุงได้โดยสะดวก ถ้าจำเป็น

- **ใช้ปุ่มเดียวตั้งแต่ซักจนถึงผ้าแห้ง**

  พบกับการซักและการจัดการผ้าจนถึงขั้นผ้าแห้งที่แสนสะดวกสบาย คุณสามารถเลือก 4 โปรแกรมทำผ้าแห้งพิเศษที่สามารถใช้กับรอบการซักทั้งหมด รวมถึงรอบการปั่นหมาดโดยใช้ปุ่มเดียว
  - Cupboard (โปรแกรมมาตรฐาน), การอบแห้งอุณหภูมิต่ำ, รีดผ้า, การอบแห้งตามกำหนดเวลา (30 นาที ~ 270 นาที)
    โปรแกรมอบแห้งเหล่านี้สามารถใช้งานได้โดยเป็นอิสระจากโปรแกรมซัก

- **ล็อคป้องกันเด็ก**

  ฟังก์ชันล็อคป้องกันเด็กช่วยป้องกันมือไม้ให้มือน้อยๆ ที่ซุกซนสามารถเปิดเครื่องซักผ้าได้โดยไม่ตั้งใจ
  คุณลักษณะเพื่อความปลอดภัยนี้ช่วยป้องกันไม่ให้เด็กๆ เล่นกับการทำงานของเครื่องซักผ้า และยังเตือนให้คุณทราบเมื่อมีการใช้งาน

- **ผ่านการรับรองสำหรับขนสัตว์**

  เครื่องซักผ้านี้ผ่านการทดสอบและผ่านข้อกำหนดของ Woolmark Company สำหรับผลิตภัณฑ์ขนสัตว์ที่ใช้เครื่องซักผ้าได้
  โปรดซักผ้าตามคำแนะนำที่ฉลากของผ้า ตามที่ระบุโดย Woolmark และ Samsung

- **ตั้งเวลาซักล่วงหน้า**

  ตั้งเวลาซักล่วงหน้าสำหรับโปรแกรมซักได้ถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง เพิ่มความสะดวกในการใช้เครื่องซักผ้า
  โดยเฉพาะเมื่อคุณต้องออกจากบ้าน

- **ซักเร็ว**

  ไม่ต้องเสียเวลาอีกต่อไป การซักผ้าที่ใช้เวลาไม่ถึง 30 นาทีจะช่วยให้คุณมีเวลาเพิ่มขึ้นได้อีกเหลือเฟือ
  โปรแกรมซักเร็ว 29 นาทีของเรานั้นจะเป็นทางออกสำหรับชีวิตที่ยุ่งยากของคุณ ขณะนี้คุณสามารถซักผ้าชิ้นโปรดได้ในเวลาเพียง 29 นาที

- **โปรแกรมถนอมผ้าและซักด้วยมือ**

  ให้การดูแลเป็นพิเศษด้วยอุณหภูมิที่เหมาะสม การซักที่นุ่มนวลและปริมาณน้ำที่พอเหมาะ

- **เครื่องทำความร้อนที่เป็นเซรามิคเพื่อความทนทานและการประหยัดพลังงาน (เฉพาะบางรุ่น)**

  นวัตกรรมเครื่องทำความร้อนที่เป็นเซรามิคของเรามีความทนทานมากกว่าเครื่องทำความร้อนทั่วไปถึงสองเท่า
  ช่วยประหยัดเงินในการซ่อมแซม นอกจากนี้ยังช่วยตะกอนของน้ำกระด้าง และยังช่วยประหยัดพลังงานอีกด้วย

WD8704DJ-02696G_TH_CS3.indd 2 2009-12-29 12:08:46

- **Air Wash (แอร์วอช)**

  ระบบแอร์วอชจะขจัดกลิ่นไม่พึงประสงค์และฆ่าเชื้อ 'แบคทีเรีย' และไรฝุ่นในผ้าซึ่งไม่สามารถกำจัดได้ด้วยระบบการซักทั่วไป เป็นคุณประโยชน์ของกลไกการซักแบบแอร์วอช
  - ใช้แอร์วอชได้ : โค้ทขนสัตว์ เสื้อผ้าฝ้าย/ขนสัตว์ สเว็ตเตอร์ สูท หมอน เบาะ ตุ๊กตาผ้า
  - ใช้ไม่ได้ : หนัง ไหม กำมะหยี่ ผ้าห่มไฟฟ้า ผ้าเปื้อนอื่นๆ

- **จอแสดงผลดิจิตัล**

  จอแสดงผลดิจิตัล (แผงควบคุม) มีความชัดเจนและใช้งานง่าย เพื่อความสะดวกในการใช้งาน นอกจากนี้ จอแสดงผลดิจิตัลนี้ยังให้ความสะดวกในการปรับค่าต่างๆ เพื่อให้การซักที่ดีเยี่ยม

- **ประตูแบบกว้าง**

  ช่องประตูกว้างพิเศษเพื่อการดูที่สะดวก ใส่และนำผ้าออกได้ง่าย โดยเฉพาะสำหรับผ้าชิ้นใหญ่เช่นผ้าปูเตียงและผ้าขนหนู ฯลฯ

- **มอเตอร์ไดเรคไดรฟ์**

  เนื่องจากถังซักไม่ได้ใช้สายพานหรือเฟือง ทำให้สามารถลดการสั่นสะเทือนได้อย่างมาก คุณสมบัตินี้จะช่วยให้เครื่องซักผ้าของคุณเงียบและทนทานยิ่งขึ้น

คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษาเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดอ่านคู่มือนี้เพื่อดูคำอธิบายแผงควบคุม คำแนะนำเกี่ยวกับการใช้เครื่องซักผ้า และเคล็ดลับในการใช้ประโยชน์สูงสุดจากคุณสมบัติและฟังก์ชันที่ล้ำหน้า หัวข้อ "**การแก้ไขปัญหาและรหัสข้อมูล**" ในหน้า 30 จะให้ข้อมูลเกี่ยวกับสิ่งที่สามารถดำเนินการ ถ้ามีข้อผิดพลาดกับเครื่องซักผ้าของคุณ

WD8704DJ-02696G_TH_CS3.indd 3 2009-12-29 12:08:46

ข้อมูลเกี่ยวกับความปลอดภัย

ขอแสดงความยินดีกับเครื่องซักผ้า Samsung ActivFresh™ เครื่องใหม่ของคุณ คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษาเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดสละเวลาเพื่ออ่านคู่มือนี้ เพื่อใช้ประโยชน์สูงสุดจากคุณสมบัติและคุณประโยชน์มากมายของเครื่องซักผ้า

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือนี้โดยละเอียดเพื่อให้มั่นใจว่าคุณทราบวิธีใช้คุณลักษณะและฟังก์ชันต่างๆ ของอุปกรณ์ชิ้นใหม่นี้ได้อย่างปลอดภัยและมีประสิทธิภาพ และโปรดเก็บไว้ในที่ปลอดภัยใกล้กับอุปกรณ์ เพื่อให้สามารถอ้างอิงได้ในภายหลัง ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น

คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเครื่องซักผ้าของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอาจอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

สัญลักษณ์และคำเตือนเพื่อความปลอดภัยที่สำคัญ

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้นี้:

คำเตือน	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บรุนแรง การเสียชีวิต หรือทรัพย์สินเสียหาย**
ข้อควรระวัง	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บและ/หรือทรัพย์สินเสียหาย.**
ข้อควรระวัง	ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้:

	ห้ามทำ
	ห้ามถอดประกอบ
	ห้ามสัมผัส
	ทำตามคำแนะนำอย่างเคร่งครัด
	ถอดปลั๊กของเครื่องซักผ้าจากเต้าเสียบที่ผนัง
	ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกันไฟฟ้าดูด
	ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ
	หมายเหตุ

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บ
โปรดปฏิบัติตามอย่างเคร่งครัด
หลังจากอ่านส่วนนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

WD8704DJ-02696G_TH_CS3.indd 4 2009-12-29 12:08:47

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

WD8704DJ-02696G_TH_CS3.indd 5 2009-12-29 12:08:47

ข้อมูลเกี่ยวกับความปลอดภัย

คำเตือน สัญญาณคำเตือนสำคัญสำหรับการติดตั้ง

การติดตั้งอุปกรณ์นี้ต้องกระทำโดยช่างเทคนิคที่ได้รับการรับรอง หรือบริษัทผู้ให้บริการ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

อุปกรณ์นี้มีน้ำหนักมาก โปรดใช้ความระมัดระวังเมื่อยก

ต่อสายไฟเข้ากับเต้ารับไฟฟ้า AC 220V/50Hz/15A ขึ้นไป และใช้เต้ารับสำหรับอุปกรณ์นี้เพียงอย่างเดียว นอกจากนี้
โปรดอย่าใช้สายไฟสำหรับต่อ
- การใช้เต้ารับไฟฟ้าที่ผนังร่วมกับอุปกรณ์อื่นโดยผ่านสายไฟสำหรับต่อ หรือแถบปลั๊กไฟ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์ มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา

นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากขั้วของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง
- ถอดปลั๊กไฟและทำความสะอาดด้วยผ้าแห้ง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ต่อปลั๊กไฟเข้ากับเต้ารับให้ถูกทิศทาง เพื่อให้สายไฟพาดไปทางพื้น
- ถ้าคุณต่อปลั๊กไฟกับเต้ารับในทางตรงกันข้าม ลวดนำไฟฟ้าภายในสายไฟอาจเสียหายและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก
- ถ้าเด็กนำถุงพลาสติกมาสวมศีรษะ อาจทำให้หายใจไม่ออก

เมื่ออุปกรณ์หรือปลั๊กไฟ หรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ

อุปกรณ์ต้องได้รับการลงกราวด์อย่างเหมาะสม
ห้ามลงกราวด์อุปกรณ์กับท่อก๊าซ ท่อน้ำพลาสติก หรือสายโทรศัพท์
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด หรือปัญหากับผลิตภัณฑ์
- ห้ามต่อปลั๊กไฟฟ้ากับเต้ารับไฟฟ้าที่ไม่ได้ลงกราวด์อย่างถูกต้อง และโปรดตรวจสอบว่าเป็นไปตามข้อกำหนดของท้องถิ่นและของประเทศ

ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัสดุที่ติดไฟง่าย
ห้ามติดตั้งอุปกรณ์นี้ในที่ชื้น มีน้ำมัน หรือมีฝุ่นมาก ในตำแหน่งที่ได้รับแสงแดดหรือน้ำ (น้ำฝน) โดยตรง

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่มีอุณหภูมิต่ำ
- น้ำที่แข็งตัวจะทำให้ท่อต่างๆ ระเบิด

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่อาจมีก๊าซรั่วไหล
- -อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้เครื่องแปลงไฟฟ้า
- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม
- -อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้แรงดึงหรือหักงอสายไฟ
ห้ามบิดหรือผูกปมกับสายไฟ
อย่าแขวนสายไฟไว้กับโลหะ วางของหนักทับสายไฟ เดินสายไฟไว้ระหว่างวัตถุอื่น หรือดันสายไฟเข้าสู่ช่องว่างด้านหลังอุปกรณ์
- -อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามดึงสายไฟ เมื่อถอดปลั๊กไฟออกจากเต้ารับ
- ถอดปลั๊กไฟด้วยการจับที่ตัวปลั๊ก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ห้ามวางสายไฟและท่อในที่ซึ่งคุณอาจสะดุดได้ง่าย

WD8704DJ-02696G_TH_CS3.indd 6 2009-12-29 12:08:47

ข้อควรระวัง สัญญาณข้อควรระวังสำหรับการติดตั้ง

อุปกรณ์นี้ควรอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กไฟได้ง่าย
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้เนื่องจากไฟฟ้ารั่ว

ติดตั้งและปรับระดับเครื่องซักผ้าบนพื้นที่สามารถรับน้ำหนักได้
- มิฉะนั้นอาจทำให้มีการสั่นสะเทือนผิดปกติ มีการเคลื่อนที่ เสียงรบกวน หรือมีปัญหากับผลิตภัณฑ์

คำเตือน สัญญาณคำเตือนสำคัญสำหรับการใช้งาน

ถ้าอุปกรณ์มีน้ำท่วม ให้ตัดไฟฟ้าและการจ่ายน้ำทันที และติดต่อศูนย์บริการใกล้บ้าน
- ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ห้ามสัมผัสกับอุปกรณ์หรือสายไฟ
- ห้ามใช้พัดลมไฟฟ้า
- อาจเกิดประกายไฟที่ทำให้ระเบิดหรือเพลิงไหม้

อย่าให้เด็กเล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า นอกจากนี้ เมื่อทิ้งอุปกรณ์ ให้ถอดก้านล็อคประตูเครื่องซักผ้าออก
- ถ้าติดอยู่ภายใน เด็กอาจไม่สามารถออกมาได้และอาจหายใจไม่ออกจนกระทั่งเสียชีวิต

โปรดนำบรรจุภัณฑ์ (ฟองน้ำ โฟม) ที่ด้านล่างของเครื่องซักผ้าออกก่อนที่จะใช้งาน

WD8704DJ-02696G_TH_CS3.indd 7 2009-12-29 12:08:48

ข้อมูลเกี่ยวกับความปลอดภัย

ห้ามซักผ้าที่เปื้อนน้ำมันเชื้อเพลิง น้ำมันก๊าด เบนซีน ทินเนอร์ แอลกอฮอล์ หรือสารไวไฟหรือสารระเหยชนิดต่างๆ
- อาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้หรือระเบิดได้

ห้ามเปิดประตูเครื่องโดยใช้แรงขณะที่เครื่องทำงาน (การซัก/อบแห้ง/ปั่นหมาดขณะอุณหภูมิสูง)
- น้ำที่ไหลออกจากเครื่องซักผ้าอาจทำให้ร้อนลวกหรือทำให้พื้นลื่น

อาจทำให้เกิดการบาดเจ็บได้
- การใช้แรงเปิดประตูอาจทำให้ผลิตภัณฑ์เสียหายหรือทำให้เกิดการบาดเจ็บ

โปรดอย่าสอดมือเข้าใต้เครื่องซักผ้า
- อาจทำให้เกิดการบาดเจ็บได้

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- อาจทำให้เกิดไฟฟ้าช็อตได้

ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่
- การต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้าอีกครั้งอาจทำให้เกิดประกายไฟและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

อย่าปล่อยให้เด็กหรือบุคคลที่ไม่แข็งแรงใช้เครื่องซักผ้านี้โดยไม่มีผู้ดูแล อย่าให้เด็กเข้าสู่ภายในอุปกรณ์
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต น้ำร้อนลวก หรือบาดเจ็บได้

โปรดอย่าสอดมือหรือโลหะเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน
- อาจทำให้เกิดการบาดเจ็บได้

โปรดอย่าถอดปลั๊กอุปกรณ์ด้วยการดึงที่สายไฟ ให้จับที่ตัวปลั๊กและดึงออกจากเต้ารับไฟฟ้าตรงๆ

- ความเสียหายที่เกิดขึ้นกับสายไฟอาจทำให้เกิดการลัดวงจร เพลิงไหม้ และ/หรือไฟฟ้าช็อต

โปรดอย่าซ่อมแซม ถอดประกอบ หรือดัดแปลงเครื่องด้วยตนเอง
- ห้ามใช้ฟิวส์ (เช่น สายทองแดง ลวดโลหะ ฯลฯ) นอกเหนือจากฟิวส์มาตรฐาน
- เมื่อจำเป็นต้องซ่อมแซมหรือติดตั้งอุปกรณ์ซ้ำอีกครั้ง โปรดติดต่อศูนย์บริการใกล้บ้านคุณ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

ถ้ามีสิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

เมื่อท่อจ่ายน้ำหลวมหลุดออกจากก๊อกและทำให้น้ำท่วมอุปกรณ์ ให้ถอดปลั๊กไฟ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ถอดปลั๊กไฟเมื่อไม่ได้ใช้อุปกรณ์เป็นเวลานาน หรือระหว่างพายุฝนฟ้าคะนอง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

WD8704DJ-02696G_TH_CS3.indd 8 2009-12-29 12:08:48

ข้อควรระวัง สัญญาณข้อควรระวังสำหรับการใช้งาน

เมื่อเครื่องซักผ้าเปื้อนสิ่งแปลกปลอมเช่น สารซักฟอก สิ่งสกปรก เศษอาหาร ฯลฯ ให้ถอดปลั๊กไฟและทำความสะอาดเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ

- มิฉะนั้นอาจทำให้ผลิตภัณฑ์เปลี่ยนสี เปลี่ยนรูป เสียหาย หรือเกิดสนิม

กระจกด้านหน้าสามารถแตกได้เมื่อกระแทกแรงๆ โปรดใช้ความระมัดระวังเมื่อใช้เครื่องซักผ้า

- เมื่อกระจกแตก อาจทำให้เกิดการบาดเจ็บได้

หลังจากการจ่ายน้ำไม่ทำงานหรือเมื่อต่อท่อจ่ายน้ำใหม่ ให้เปิดก๊อกน้ำช้าๆ
เปิดก๊อกน้ำช้าๆ หลังจากไม่ได้ใช้งานมาเป็นเวลานาน

- แรงดันอากาศในท่อจ่ายน้ำหรือท่อน้ำประปาอาจทำให้ชิ้นส่วนของเครื่องเสียหายหรือทำให้น้ำรั่ว

ถ้าเกิดข้อผิดพลาดในการระบายน้ำระหว่างการทำงาน ให้ตรวจสอบว่ามีปัญหาของการระบายน้ำหรือไม่

- ถ้าใช้เครื่องซักผ้าเมื่อมีน้ำท่วม เนื่องจากปัญหาการระบายน้ำ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้เนื่องจากไฟฟ้ารั่ว

ใส่ผ้าในเครื่องซักผ้าโดยระวังอย่าให้ผ้าติดอยู่ที่ประตู

- ถ้าผ้าติดอยู่ที่ประตู อาจทำให้ผ้าเสียหายหรือเครื่องซักผ้าเสียหาย หรือทำให้น้ำรั่ว

ตรวจสอบว่าปิดก๊อกน้ำไว้ เมื่อไม่ได้ใช้เครื่องซักผ้า

- ตรวจสอบว่าสกรูของข้อต่อท่อจ่ายน้ำนั้นมีการขันไว้อย่างถูกต้อง
- มิฉะนั้นอาจทำให้เกิดความเสียหายแก่ทรัพย์สินหรือเกิดการบาดเจ็บ

ตรวจสอบว่าซีลยางไม่ได้ปนเปื้อนสิ่งแปลกปลอม (สิ่งสกปรก เศษด้าย ฯลฯ)

- ถ้าไม่ได้ปิดประตูจนสนิท อาจทำให้น้ำรั่ว

เปิดก๊อกและตรวจสอบว่าข้อต่อของท่อจ่ายน้ำมีการขันไว้อย่างแน่นหนาแล้วหรือไม่ และไม่มีน้ำรั่ว ก่อนที่จะใช้ผลิตภัณฑ์

- ถ้าสกรูหรือข้อต่อท่อจ่ายน้ำหลวม อาจทำให้น้ำรั่ว +

ในการลดความเสี่ยงที่จะเกิดไฟไหม้หรือระเบิด:

- ในบางกรณีอาจมีก๊าซไฮโดรเจนเกิดขึ้นในระบบน้ำร้อน เช่น เครื่องทำน้ำร้อนของคุณ ซึ่งไม่ได้ใช้งานเป็นเวลาสองสัปดาห์ขึ้นไป ก๊าซไฮโดรเจนนั้นสามารถระเบิดได้ ถ้าระบบน้ำร้อนของคุณไม่ได้มีการใช้งานเป็นเวลาสองสัปดาห์ขึ้นไป ให้เปิดก๊อกน้ำร้อนทั้งหมดในบ้านปล่อยให้น้ำไหลสักครู่ก่อนที่จะใช้เครื่องซักผ้า ซึ่งจะเป็นการระบายก๊าซไฮโดรเจนสะสม เนื่องจากก๊าซไฮโดรเจนนั้นเป็นวัตถุไวไฟ โปรดอย่าสูบบุหรี่หรือจุดไฟในระหว่างนี้ ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ถ้ามีก๊าซรั่ว

WD8704DJ-02696G_TH_CS3.indd 9 2009-12-29 12:08:48

ข้อมูลเกี่ยวกับความปลอดภัย

อย่ายืนบนอุปกรณ์หรือวางสิ่งของ (เช่น ผ้า เทียนที่จุดไฟแล้ว บุหรี่ที่ติดไฟ จาน สารเคมี วัตถุที่เป็นโลหะ ฯลฯ) บนอุปกรณ์

- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือปัญหากับผลิตภัณฑ์

ห้ามพ่นสารระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง

- นอกจากจะเป็นอันตรายต่อมนุษย์แล้ว ยังอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือมีปัญหากับผลิตภัณฑ์ได้

อย่าวางวัตถุที่สร้างสนามแม่เหล็กไฟฟ้าไว้ใกล้เครื่องซักผ้า

- อาจทำให้เกิดการบาดเจ็บเนื่องจากการทำงานผิดปกติได้

เนื่องจากน้ำที่ระบายระหว่างการซักผ้าอุณหภูมิสูงหรือรอบการอบแห้งนั้นจะร้อนจัด โปรดอย่าสัมผัสน้ำ

- อาจทำให้เกิดการลวกหรือบาดเจ็บได้

ห้ามซัก ปั่น หรืออบแห้งเบาะรองนั่ง เบาะ หรือเสื้อผ้า (*) ที่กันน้ำ ยกเว้นอุปกรณ์ของคุณมีโปรแกรมพิเศษสำหรับซักสิ่งของเหล่านี้

- อย่าซักเบาะที่หนาและแข็ง แม้ว่าจะมีสัญลักษณ์เครื่องซักผ้าบนป้ายดูแลผ้าก็ตาม
- อาจทำให้เกิดการบาดเจ็บหรือทำให้เครื่องซักผ้า ผนัง พื้น หรือผ้าเสียหาย เนื่องจากการสั่นสะเทือนมากเกินไป

* เครื่องนอนขนสัตว์ เสื้อกันฝน เสื้อชูชีพ กางเกงเล่นสกี ถุงนอน ผ้าปิดผ้าอ้อม ชุดกันลม และผ้าคลุมจักรยาน จักรยานยนต์ รถยนต์ ฯลฯ

อย่าใช้เครื่องซักผ้าขณะที่ถอดลิ้นซักใส่ผงซักฟอกออก

- อาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บเนื่องจากน้ำรั่ว

อย่าสัมผัสภายในของถังซักระหว่างหรือหลังจากการอบแห้ง เนื่องจากจะร้อนจัด

- อาจทำให้เกิดการร้อนลวกได้

อย่าสอดมือเข้าสู่ช่องใส่ผงซักฟอกหลังจากที่เปิดออก

- อาจทำให้เกิดการบาดเจ็บเนื่องจากมือติดในช่องใส่ผงซักฟอก อย่าใส่วัตถุใดๆ (เช่น รองเท้า เศษอาหาร สัตว์) นอกเหนือจากผ้าเข้าสู่เครื่องซักผ้า
- อาจทำให้เกิดความเสียหายกับเครื่องซักผ้า หรือเกิดการบาดเจ็บหรือเสียชีวิตในกรณีของสัตว์เลี้ยง เนื่องจากการสั่นสะเทือนมากกว่าปกติ

อย่ากดปุ่มต่างๆ ด้วยของแหลม เช่น หมุด มีด เล็บ ฯลฯ

- อาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้

ห้ามซักผ้าที่เปื้อนน้ำมัน ครีม หรือโลชั่นทั่วไปที่ใช้ในร้านดูแลผิวหรือร้านนวด

- อาจทำให้ซีลยางเสื่อมสภาพและทำให้น้ำรั่ว

อย่าทิ้งโลหะ เช่น เข็มกลัดหรือกิ๊บติดผมหรือสารซักฟอกไว้ในถังซักเป็นเวลานาน

- อาจทำให้ถังซักขึ้นสนิม
- หากถังซักเริ่มมีลักษณะเป็นสนิมที่พื้นผิว ให้ใช้สารทำความสะอาด (ไม่เป็นกรดหรือด่าง) กับพื้นผิว และใช้ฟองน้ำทำความสะอาด ห้ามใช้แปรงขนลวดเด็ดขาด

ห้ามใช้สารทำความสะอาดแบบซักแห้งโดยตรงและห้ามซัก ล้าง หรือปั่นหมาดผ้าที่เปื้อนสารซักแห้ง

- อาจทำให้เกิดการติดไฟขึ้นในทันทีเนื่องจากความร้อนของการออกซิเดชันของน้ำมัน

ห้ามใช้น้ำร้อนจากอุปกรณ์ทำน้ำร้อน/น้ำเย็น

- อาจทำให้เกิดปัญหาในเครื่องซักผ้า

WD8704DJ-02696G_TH_CS3.indd 10 2009-12-29 12:08:48

ห้ามใช้สารซักฟอกสำหรับซักมือกับเครื่องซักผ้า
- ถ้ามีการแข็งตัวและสะสมอยู่ในเครื่องซักผ้า อาจทำให้เกิดปัญหากับผลิตภัณฑ์ ทำให้สีเปลี่ยน ขึ้นสนิม หรือทำให้มีกลิ่นอับ

ห้ามซักผ้าชิ้นใหญ่เช่นผ้าปูที่นอนในถุงซักผ้า
- ใส่ถุงเท้าและเสื้อชั้นในลงในถุงซักผ้าและซักร่วมกับผ้าอื่นๆ
- มิฉะนั้นอาจเกิดการบาดเจ็บเนื่องจากการสั่นสะเทือนผิดปกติ

ห้ามใช้ผงซักฟอกแบบก้อน
- ถ้ามีการสะสมในเครื่อง อาจทำให้เกิดน้ำรั่ว

สำหรับเครื่องซักผ้าที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมหรือวัสดุชนิดอื่นปิดกั้นช่องนี้

ตรวจสอบว่าไม่มีสิ่งใดอยู่ในกระเป๋าเสื้อผ้าที่จะซัก
- ของแข็ง ของมีคม เช่น เหรียญ เข็มกลัด ตะปู ตะปูควง หรือก้อนหินอาจทำให้เกิดความเสียหายแก่อุปกรณ์ได้

ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่

คำเตือน สัญญาณคำเตือนสำคัญสำหรับการทำความสะอาด

ห้ามทำความสะอาดอุปกรณ์ด้วยการพ่นน้ำลงบนเครื่องโดยตรง
โปรดอย่าใช้สารเคมีเช่น เบนซิน ทินเนอร์ แอลกอฮอล์เพื่อทำความสะอาดอุปกรณ์
- อาจทำให้สีเปลี่ยน เสื่อมสภาพ เสียหาย เกิดไฟฟ้าช็อตหรือไฟไหม้

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่มเปิด/ปิด
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

WD8704DJ-02696G_TH_CS3.indd 11 2009-12-29 12:08:48

สารบัญ

การติดตั้งเครื่องซักผ้า 13

13 การตรวจสอบชิ้นส่วนอุปกรณ์
14 การปฏิบัติตามข้อกำหนดในการติดตั้ง
14 คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์
14 การจ่ายน้ำ
15 การระบายน้ำ
15 พื้น
15 อุณหภูมิโดยรอบ
15 การติดตั้งในซุ้มหรือตู้
15 การติดตั้งเครื่องซักผ้า

การซักผ้า 21

21 การซักครั้งแรก
21 คำแนะนำเบื้องต้น
22 การใช้แผงควบคุม
24 ล็อคป้องกันเด็ก
24 ปิดเสียง
24 ตั้งเวลาซักล่วงหน้า
24 ระบายน้ำเท่านั้น
25 Air Wash (แอร์วอช)
26 การใช้โปรแกรมอบแห้ง
27 การซักโดยใช้ปุ่มเลือกโปรแกรมซัก
27 การซักด้วยตนเอง
28 คำแนะนำของผ้า
29 ข้อมูลผงซักฟอกและสารเพิ่มเติมต่างๆ
29 ควรใช้ผงซักฟอกแบบใด
29 ช่องใส่ผงซักฟอก

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า 30

30 การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน
30 การทำความสะอาดภายนอก
31 การทำความสะอาดช่องใส่และที่พักผงซักฟอก
31 การทำความสะอาดตัวกรองเศษผ้า
32 การทำความสะอาดตัวกรองท่อจ่ายน้ำ
32 การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว
32 การจัดเก็บเครื่องซักผ้า

การแก้ไขปัญหาและรหัสข้อมูล 33

33 ตรวจสอบสิ่งต่อไปนี้ถ้าเครื่องซักผ้าของคุณ...
34 รหัสข้อมูล

ผังโปรแกรม 35

35 ผังโปรแกรม

ภาคผนวก 36

36 ผังการดูแลผ้า
36 การปกป้องสิ่งแวดล้อม
36 ประกาศเกี่ยวกับมาตรฐาน

WD8704DJ-02696G_TH_CS3.indd 12 2009-12-29 12:08:48

การติดตั้งเครื่องซักผ้า

โปรดให้ผู้ติดตั้งปฏิบัติตามคำแนะนำนี้อย่างเคร่งครัด เพื่อให้เครื่องซักผ้าใหม่ของคุณทำงานอย่างถูกต้อง และไม่เสี่ยงต่อการบาดเจ็บขณะซักผ้า

การตรวจสอบชิ้นส่วนอุปกรณ์

นำเครื่องซักผ้าออกจากบรรจุภัณฑ์ และตรวจสอบว่าคุณได้รับชิ้นส่วนทั้งหมดที่แสดงด้านล่างนี้ ถ้าเครื่องซักผ้าของคุณได้รับความเสียหายระหว่างการขนส่ง หรือถ้าคุณไม่ได้รับชิ้นส่วนทั้งหมดครบถ้วน โปรดติดต่อฝ่ายบริการลูกค้าของ Samsung หรือตัวแทนจำหน่ายของ Samsung

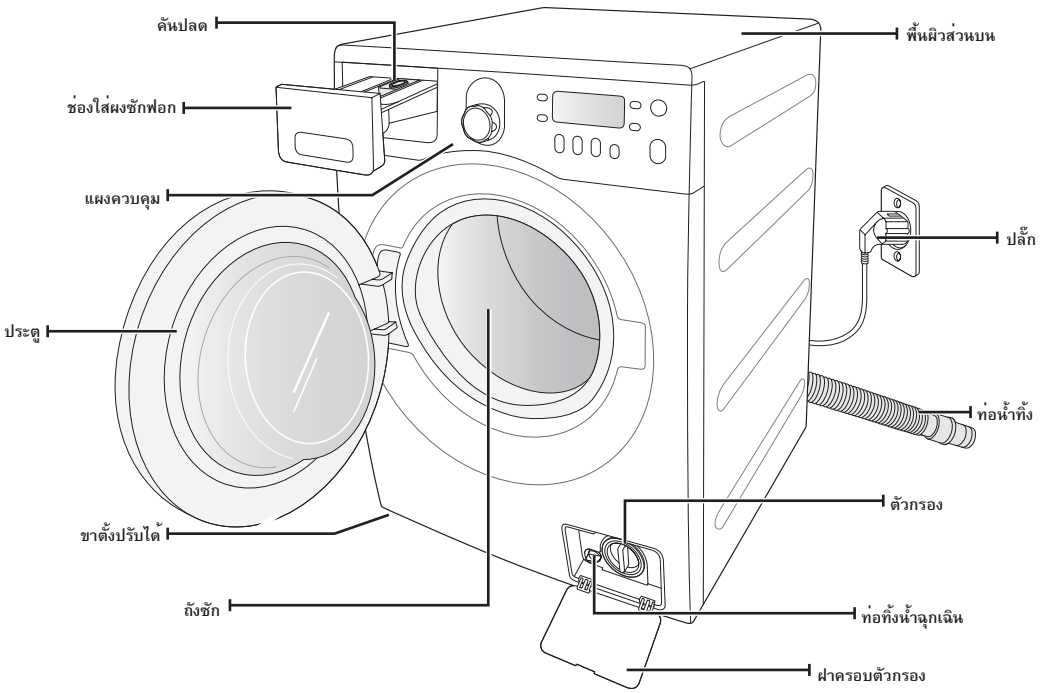

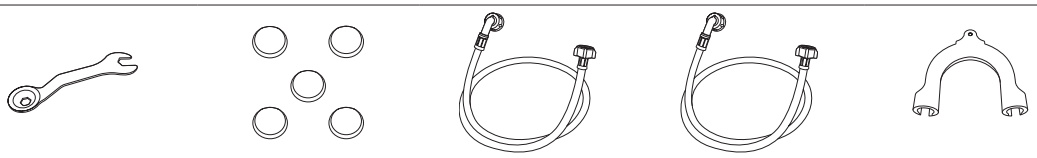

ประแจ | ที่ปิดช่องใส่หมุด | ท่อจ่ายน้ำ: เย็น, ร้อน (เฉพาะบางรุ่น) | ตัวนำท่อ

WD8704DJ-02696G_TH_CS3.indd 13 2009-12-29 12:08:49

การติดตั้งเครื่องซักผ้า

การปฏิบัติตามข้อกำหนดในการติดตั้ง

คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์

เพื่อป้องกันการเกิดเพลิงไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บโดยไม่จำเป็น การเดินสายและสายกราวด์ทั้งหมดจะต้องกระทำตามข้อกำหนด National Electrical Code ANSI/FNPA, No. 70 ฉบับล่าสุด และรหัสและข้อบังคับในพื้นที่ เจ้าของอุปกรณ์มีหน้าที่จัดหาบริการด้านไฟฟ้าที่เพียงพอสำหรับอุปกรณ์นี้

ห้ามใช้สายไฟสำหรับต่อ
ใช้สายไฟที่มากับเครื่องซักผ้าเท่านั้น

ขณะที่เตรียมพร้อมสำหรับการติดตั้ง โปรดตรวจสอบว่าแหล่งจ่ายไฟของคุณมีสิ่งต่อไปนี้:

- ฟิวส์หรือเบรกเกอร์ 220V~240V 50Hz 15 แอมป์
- วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ

เครื่องซักผ้าต้องได้รับการลงกราวด์อย่างเหมาะสม ถ้าเครื่องซักผ้าทำงานผิดปกติหรือเสียหาย การลงกราวด์จะช่วยลดความเสี่ยงที่จะเกิดไฟฟ้าช็อต โดยจะเป็นทางระบายกระแสไฟฟ้าที่มีแรงต้านทานน้อยที่สุด
เครื่องซักผ้าของคุณมาพร้อมกับสายไฟที่มีปลั๊กลงกราวด์สามขา สำหรับใช้กับเต้าเสียบไฟฟ้าที่ติดตั้งและลงกราวด์อย่างเหมาะสม

ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน

การเชื่อมต่อสายกราวด์อุปกรณ์อย่างไม่เหมาะสมจะทำให้เกิดไฟฟ้าช็อต
โปรดติดต่อช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีความชำนาญ ถ้าคุณสงสัยว่าเครื่องซักผ้ามีการลงกราวด์อย่างเหมาะสมหรือไม่ ห้ามดัดแปลงปลั๊กที่มากับเครื่องซักผ้า ถ้าไม่สามารถใช้ร่วมกับเต้าเสียบได้ โปรดให้ช่างที่มีความชำนาญเป็นผู้ติดตั้งเต้าเสียบที่เหมาะสม

การจ่ายน้ำ

เครื่องซักผ้าของคุณจะเติมน้ำอย่างเหมาะสมเมื่อมีแรงดันน้ำ 50 kPa ~ 800 kPa แรงดันน้ำต่ำกว่า 50 kPa จะทำให้วาล์วน้ำทำงานผิดพลาด ทำให้วาล์วน้ำไม่สามารถปิดอย่างเหมาะสม หรือมิฉะนั้น อาจทำให้เครื่องซักผ้าใช้เวลาในการเติมน้ำนานเกินกว่าที่ระบบควบคุมกำหนด ทำให้เครื่องซักผ้าปิดลง (ในระบบควบคุมมีขีดจำกัดเวลาการเติมน้ำ ได้รับการออกแบบเพื่อป้องกันน้ำล้น/ท่วมถ้าท่อน้ำหลวม)

ก๊อกน้ำต้องห่างไม่เกิน 4 ฟุต (122 ซม.) จากด้านหลังของเครื่องซักผ้า เพื่อให้สามารถต่อท่อจ่ายน้ำที่ให้มากับเครื่องซักผ้าได้

ร้านจำหน่ายอุปกรณ์เดินท่อจะมีท่อจ่ายน้ำความยาวต่างๆ ถึง 10 ฟุต (305 ซม.)

คุณสามารถลดความเสี่ยงของน้ำรั่วและความเสียหายจากน้ำโดย:

- ติดตั้งให้ท่อน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- ตรวจสอบรอยรั่วที่ข้อต่อของท่อจ่ายน้ำเป็นประจำ

ก่อนที่จะใช้เครื่องซักผ้าเป็นครั้งแรก โปรดตรวจสอบการต่อท่อและวาล์วจ่ายน้ำเพื่อหารอยรั่ว

WD8704DJ-02696G_TH_CS3.indd 14 2009-12-29 12:08:49

การระบายน้ำ

Samsung แนะนำให้ใช้ท่อตั้งมีความสูง 18 นิ้ว (46 ซม.) ท่อระบายน้ำต้องวางผ่านคลิปท่อระบายน้ำไปยังท่อตั้งดังกล่าว ท่อตั้งจะต้องมีขนาดใหญ่พอที่จะรับเส้นผ่าศูนย์กลางภายนอกของท่อระบายน้ำ ท่อระบายน้ำติดมาจากโรงงาน

พื้น

เพื่อให้ได้ประสิทธิภาพสูงสุด โปรดติดตั้งเครื่องซักผ้าบนพื้นที่แข็งแรงมั่นคง พื้นไม้อาจต้องได้รับการเสริมแรงเพื่อลดการสั่นสะเทือน และ/หรือการรับน้ำหนักที่ขาดสมดุล พื้นผิวที่ปูพรมและวัสดุอ่อนนุ่มอาจทำให้เกิดการสั่นสะเทือน และอาจทำให้เครื่องซักผ้าเคลื่อนตัวเล็กน้อยระหว่างรอบการปั่นหมาด

ห้ามติดตั้งเครื่องซักผ้าบนที่ยกพื้นหรือโครงสร้างที่ไม่แข็งแรง

อุณหภูมิโดยรอบ

ห้ามติดตั้งเครื่องซักผ้าในพื้นที่ซึ่งน้ำอาจแข็งตัวได้ เนื่องจากเครื่องซักผ้าของคุณจะมีน้ำอยู่ในวาล์ว ปั๊ม และท่อเสมอ น้ำที่แข็งตัวในท่ออาจทำให้สายพาน ปั๊ม และองค์ประกอบอื่นๆ เสียหาย

การติดตั้งในชุ้มหรือตู้

ในการใช้งานอย่างปลอดภัยและเหมาะสม เครื่องซักผ้าต้องมีระยะห่าง:

ด้านข้าง – 25 มม.

ด้านหลัง – 51 มม.

ด้านบน – 25 มม.

ด้านหน้า – 465 มม.

ถ้าติดตั้งทั้งเครื่องซักผ้าและเครื่องอบผ้าไว้ด้วยกัน ด้านหน้าของชุ้มหรือตู้จะต้องมีช่องเปิดที่ไม่มีสิ่งกีดขวางอย่างน้อย 465 มม. เครื่องซักผ้าเพียงอย่างเดียวจะไม่ต้องมีช่องเปิดสำหรับอากาศโดยเฉพาะ

การติดตั้งเครื่องซักผ้า

ขั้นตอนที่ 1

การเลือกที่ตั้ง

ก่อนที่จะติดตั้งเครื่องซักผ้า โปรดตรวจสอบว่าสถานที่ตั้ง:

- มีพื้นผิวแข็ง ได้ระดับ โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีการระบายอากาศที่เพียงพอ
- ไม่ทำให้น้ำแข็งตัว (ต่ำกว่า 32 °F หรือ 0 °C)
- ห่างจากแหล่งความร้อน เช่น น้ำมันหรือก๊าซ
- มีพื้นที่ว่างเพียงพอที่ไม่ทำให้เครื่องซักผ้าทับสายไฟ

WD8704DJ-02696G_TH_CS3.indd 15 2009-12-29 12:08:49

การติดตั้งเครื่องซักผ้า

ขั้นตอนที่ 2

การถอดหมุดสำหรับการขนส่ง

ก่อนที่จะใช้เครื่องซักผ้า คุณต้องนำหมุดสำหรับการขนส่งห้าตัวออกจากด้านหลังของเครื่อง

1. คลายหมุดด้วยประแจที่ให้มา

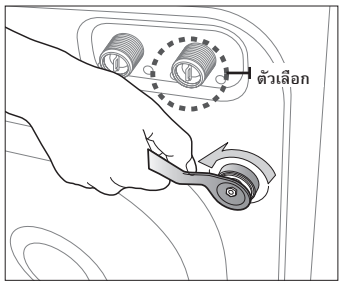

2. ดึงส่วนหัวของหมุดออกทางส่วนกว้างของช่อง ทำตามขั้นตอนนี้สำหรับหมุดแต่ละตัว

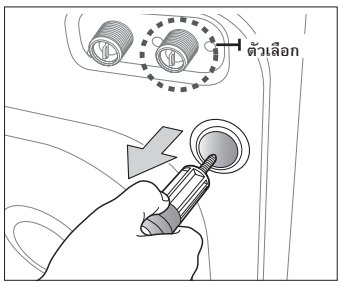

3. นำฝาปิดพลาสติกที่ให้มาใส่ในช่อง

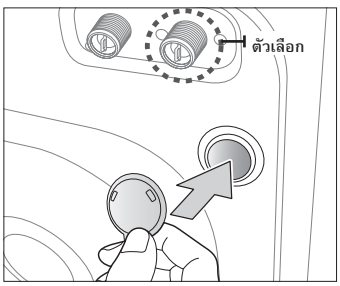

4. เก็บหมุดสำหรับขนส่งไว้ต่างหากในกรณีที่คุณต้องการย้ายเครื่องซักผ้าในอนาคต

คำเตือน บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก

WD8704DJ-02696G_TH_CS3.indd 16 2009-12-29 12:08:50

ขั้นตอนที่ 3
การปรับขาตั้งปรับระดับ

เมื่อติดตั้งเครื่องซักผ้า ให้ตรวจสอบว่าปลั๊กไฟ ท่อจ่ายน้ำและท่อระบายน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย

1. เลื่อนเครื่องซักผ้าเข้าสู่ที่ติดตั้ง
2. ปรับระดับเครื่องซักผ้าด้วยการหมุนขาตั้งเข้าและออกด้วยมือตามความต้องการ

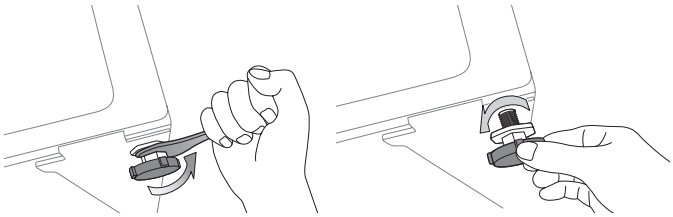

3. เมื่อเครื่องซักผ้าได้ระดับแล้ว ให้ขันน็อตให้แน่นโดยใช้ประแจที่ให้มาพร้อมกับเครื่องซักผ้า

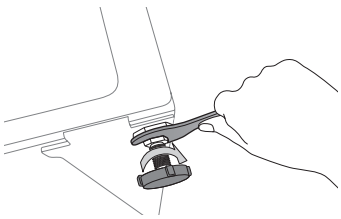

ขั้นตอนที่ 4
การต่อท่อจ่ายน้ำและท่อระบายน้ำ

การต่อท่อจ่ายน้ำ

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ใช้มือหมุนให้แน่น

ท่อจ่ายน้ำจะต้องต่อเข้ากับเครื่องซักผ้าและต่อปลายอีกด้านเข้ากับก๊อกน้ำ โปรดอย่าดึงท่อจ่ายน้ำจนตึง หากท่อจ่ายน้ำสั้นเกินไป โปรดเปลี่ยนเป็นท่อแรงดันสูงที่ยาวขึ้น

2. ต่อปลายอีกด้านเข้ากับก๊อกน้ำเย็นที่อ่างซักล้าง และขันให้แน่นด้วยมือ หากจำเป็น คุณสามารถจัดตำแหน่งของท่อจ่ายน้ำที่เครื่องซักผ้า โดยคลายข้อต่อ หมุนสาย และขันข้อต่อเข้าที่อีกครั้ง

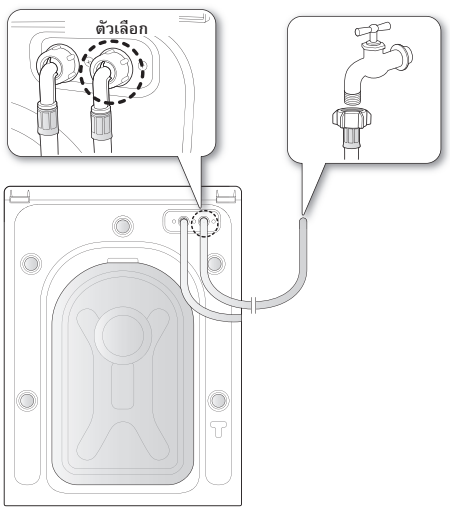

สำหรับบางรุ่นที่มีช่องรับน้ำร้อน:

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ใช้มือหมุนให้แน่น
2. ต่อปลายอีกด้านเข้ากับก๊อกน้ำเย็นที่อ่างซักล้าง และขันให้แน่นด้วยมือ
3. ใช้อุปกรณ์รูปตัว Y เฉพาะหากคุณต้องการใช้น้ำเย็น

WD8704DJ-02696G_TH_CS3.indd 17 2009-12-29 12:08:52

การติดตั้งเครื่องซักผ้า

การต่อท่อจ่ายน้ำ (เฉพาะบางรุ่น)

1. ถอดข้อต่อออกจากท่อจ่ายน้ำ

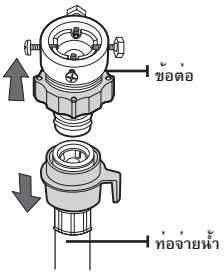

2. ใช้ไขควงแบบ "+" คลายสกรูที่ตัวแปลง ถัดจากนั้น ให้นำตัวแปลงมาหมุนส่วน (b) ตามลูกศร จนมีช่องว่าง 5 มม.

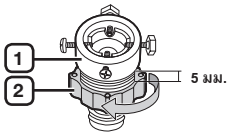

3. ต่อตัวแปลงเข้ากับก๊อกน้ำโดยขันสกรูให้แน่น และยกตัวแปลงขึ้น หมุนส่วน (2) ตามลูกศร และต่อ (1) เข้ากับ (2)

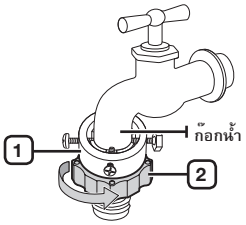

4. ให้ต่อท่อจ่ายน้ำเข้ากับข้อต่อตัวแปลง เมื่อปล่อยส่วน (3) ท่อจะต่อเข้ากับตัวแปลงโดยอัตโนมัติ พร้อมกับมีเสียง "คลิก"

หลังจากต่อท่อจ่ายน้ำเข้ากับข้อต่อแล้ว ให้ตรวจสอบว่ามีการเชื่อมต่ออย่างถูกต้อง โดยดึงท่อจ่ายน้ำลง

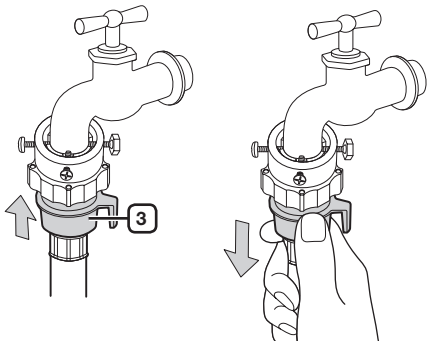

5. ต่อปลายอีกด้านของท่อจ่ายน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่อง ไขท่อตามเข็มนาฬิกาจนสุด

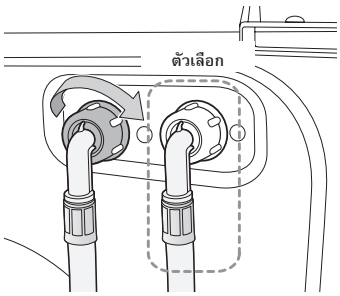

WD8704DJ-02696G_TH_CS3.indd 18 2009-12-29 12:08:54

6. เปิดน้ำ และดูว่าไม่มีน้ำรั่วจากวาล์วน้ำ ก๊อก หรือข้อต่อ ถ้ามีน้ำรั่ว ให้ทำตามขั้นตอนก่อนหน้านี้ซ้ำ

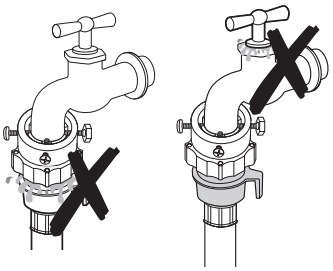

คำเตือน ห้ามใช้เครื่องซักผ้าถ้ามีน้ำรั่ว เนื่องจากอาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บได้

- หากก๊อกน้ำมีปากเป็นเกลียว ให้ต่อท่อจ่ายน้ำเข้ากับก๊อกตามภาพ

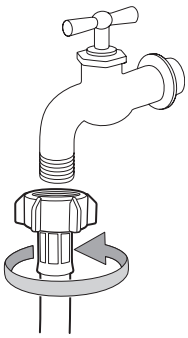

ใช้ก๊อกน้ำแบบทั่วไปในการจ่ายน้ำ หากก๊อกน้ำเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้นำวงแหวนออกก่อนที่จะต่อก๊อกเข้ากับตัวแปลง

WD8704DJ-02696G_TH_CS3.indd 19 2009-12-29 12:08:56

การติดตั้งเครื่องซักผ้า

การต่อท่อน้ำทิ้ง

ปลายของท่อน้ำทิ้งจะสามารถอยู่ในตำแหน่งต่อไปนี้:

1. **พาดขอบอ่างซักล้าง** ท่อน้ำทิ้งจะต้องมีความสูงระหว่าง 60 ถึง 90 ซม. ในการติดตั้งให้ท่อน้ำทิ้งโค้งโดยไม่พับ ให้ใช้ตัวนำท่อที่ให้มายึดท่อเข้ากับผนังด้วยขอยึด หรือยึดเข้ากับก๊อกน้ำโดยใช้เชือก เพื่อไม่ให้ท่อน้ำทิ้งเคลื่อนตัว

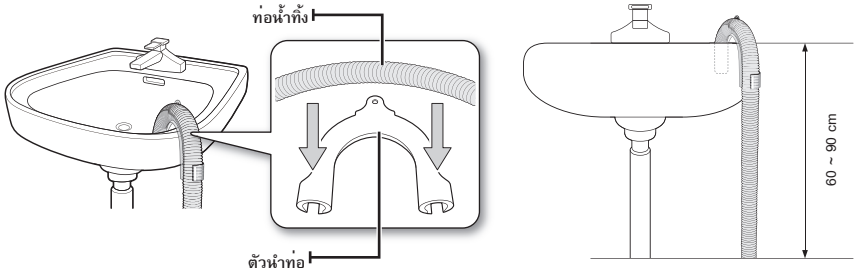

2. **ท่อแยกน้ำทิ้งของอ่างซักล้าง** ท่อแยกน้ำทิ้งจะต้องอยู่เหนือท่อพักของอ่าง เพื่อให้ปลายท่ออยู่เหนือพื้นดินอย่างน้อย 60 ซม.
3. **ในท่อน้ำทิ้ง** เราขอแนะนำให้คุณใช้ท่อแนวตั้งความสูง 65 ซม. ซึ่งจะต้องไม่สั้นกว่า 60 ซม. และไม่ยาวเกิน 90 ซม.

ขั้นตอนที่ 5

การต่อสายไฟของเครื่องซักผ้า

เสียบปลั๊กไฟเข้ากับเต้าเสียบที่ผนัง ซึ่งมีแรงดันไฟฟ้า 230 โวลต์ 50 เฮิรตซ์ ป้องกันด้วยฟิวส์ 15 แอมป์หรือเบรกเกอร์ (สำหรับข้อมูลเพิ่มเติมเกี่ยวกับข้อกำหนดด้านไฟฟ้าและการลงกราวด์ โปรดดูที่หน้า 10)

WD8704DJ-02696G_TH_CS3.indd 20 2009-12-29 12:08:59

การซักผ้า

เมื่อใช้เครื่องซักผ้าใหม่ของ Samsung สิ่งที่ยากที่สุดในการซักผ้าก็คือการตัดสินใจว่าจะซักผ้าชิ้นไหนก่อนดี

การซักครั้งแรก

ก่อนที่จะซักผ้าเป็นครั้งแรก คุณต้องเปิดเครื่องให้ทำงานครบทุกขั้นตอนโดยที่ถังซักว่าง (ไม่มีผ้า)

1. กดปุ่ม **เปิด/ปิด**
2. เติมผงซักฟอกปริมาณเล็กน้อยในช่องใส่ผงซักฟอก Ⅱ ในลิ้นชักผงซักฟอก
3. เปิดน้ำเข้าสู่เครื่องซักผ้า
4. กดปุ่ม **เริ่ม/พัก**

การทำงานนี้จะทิ้งน้ำที่หลงเหลืออยู่จากการทดสอบเครื่องของผู้ผลิต

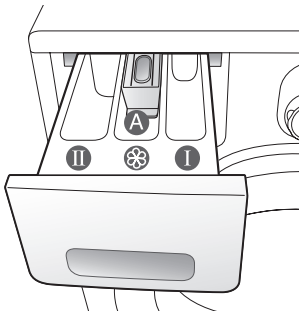

ช่องใส่ Ⅰ: ผงซักฟอกสำหรับการแช่ก่อนซัก หรือน้ำยาแช่ผ้า
ช่องใส่ Ⅱ: ผงซักฟอกสำหรับการซัก น้ำยาปรับสภาพน้ำ สารแช่ผ้า สารฟอกขาว และสารขจัดคราบ
ช่องใส่ ❀: สารเพิ่มเติม เช่น น้ำยาปรับผ้านุ่มหรือน้ำยารักษาเนื้อผ้า (ห้ามเติมเกินกว่าขอบด้านล่าง (สูงสุด) ของ “A”)

คำแนะนำเบื้องต้น

1. ใส่ผ้าในเครื่องซักผ้า

ห้ามใส่ผ้าเกินปริมาณที่กำหนด ถ้าต้องการทราบระดับความจุสำหรับผ้าแต่ละชนิด โปรดดูแผนผังในหน้า 28

คำเตือน

- ตรวจสอบว่าผ้าไม่ติดกับประตู เนื่องจากจะทำให้น้ำรั่ว
- ผงซักฟอกอาจตกค้างอยู่ที่ส่วนของยางในเครื่องซักผ้าหลังจากรอบการซัก โปรดล้างผงซักฟอกที่หลงเหลือออก เนื่องจากอาจทำให้น้ำรั่วได้
- ห้ามซักผ้าหรือสิ่งที่กันน้ำผ่านได้

2. ปิดประตูให้สลักล็อคเข้าที่
3. เปิดเครื่อง
4. เติมผงซักฟอกและสารเพิ่มเติมในช่องเติม
5. เลือกโปรแกรมซักและตัวเลือกการซักที่เหมาะสม
   ไฟสัญญาณการซักจะสว่าง และเวลาในการซักโดยประมาณจะปรากฏในจอแสดงผล
6. กดปุ่ม **เริ่ม/พัก**

WD8704DJ-02696G_TH_CS3.indd 21 2009-12-29 12:09:00

การซักผ้า

การใช้แผงควบคุม

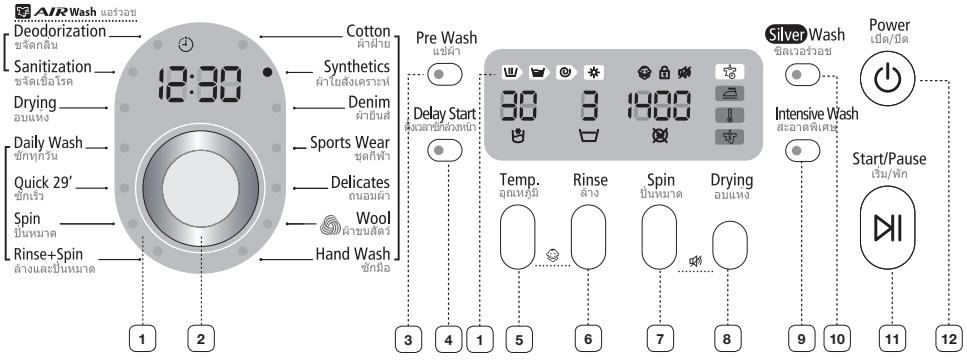

1 จอแสดงผลดิจิตัล	แสดงเวลาของรอบการซักที่เหลือ ข้อมูลการซัก และข้อความแสดงข้อผิดพลาด
2 ปุ่มเลือกโปรแกรมซัก	เลือกรูปแบบการหมุนของถังซักและความเร็วการปั่นหมาดสำหรับรอบการซัก สำหรับข้อมูลโดยละเอียด โปรดดูที่ "การซักผ้าโดยใช้ปุ่มเลือกโปรแกรมซัก" (โปรดดูหน้า 27) **Cotton (ผ้าฝ้าย)** -สำหรับผ้าฝ้ายทั่วไปหรือสกปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เชิ้ต ฯลฯ **Synthetics (ผ้าใยสังเคราะห์)** - สำหรับเสื้อ เสื้อเชิ้ต ฯลฯ ที่เปื้อนปานกลางถึงเล็กน้อย ทำจากโพลีเอสเตอร์ (ไดโอเลน, เทรวิรา) โพลีอาไมด์ (เพอร์ลอน ไนลอน) หรือส่วนผสมอื่น **Denim (ผ้ายีนส์)** - ระดับน้ำที่สูงขึ้นในการซักหลักและการล้างน้ำเพิ่มอีกหนึ่งรอบช่วยให้มั่นใจว่าผงซักฟอกจะไม่หลงเหลือเป็นรอยบน **Sports Wear (ชุดกีฬา)** - ใช้สำหรับเนื้อผ้าที่กันน้ำหรือผ้ามันเพื่อรักษาสภาพเนื้อหาให้ดีเช่นเดิมและให้ความรู้สึกสดชื่น **Delicates (ถนอมผ้า)** - สำหรับผ้าเนื้อบาง ชุดชั้นในสตรี ชุดชั้นใน ชุดกระโปรง เสื้อเชิ้ต และเสื้อ เพื่อให้ได้ผลลัพธ์ที่ดียิ่งขึ้น โปรดใช้ผงซักฟอกแบบน้ำ **Wool (ผ้าขนสัตว์)** - เฉพาะสำหรับขนสัตว์ที่ซักด้วยเครื่องได้ ผ้าควรมีน้ำหนักไม่เกิน 2.0 กก. • โปรแกรมผ้าขนสัตว์จะซักผ้าโดยใช้การหมุนแบบนุ่มนวล ระหว่างการซัก การหมุนแบบนุ่มนวลและการแช่จะคุ้มครองเส้นใยผ้าขนสัตว์ไม่ให้หดตัว/ผิดรูป และเพื่อให้มีความสะอาดพร้อมกับการถนอมผ้า การหยุดทำงานในระหว่างนี้ไม่ใช่ปัญหาแต่อย่างใด • ขอแนะนำให้ใช้สารซักฟอกที่มีฤทธิ์เป็นกลางสำหรับโปรแกรมผ้าขนสัตว์ เพื่อให้ผลการซักดียิ่งขึ้นและเพื่อรักษาเนื้อผ้า ขนสัตว์ รอบ การซักผ้าขนสัตว์ของเครื่องนี้ได้รับการรับรองโดย Woolmark สำหรับการซักผลิตภัณฑ์ Woolmark ที่ซักด้วยเครื่องได้ และมีการซักตามคำแนะนำที่ฉลากของผ้า และที่ผู้ผลิตเครื่องซักผ้าระบุ M0509 (หมายเลขใบรับรองจาก IWS NOM INEE Co., Ltd.) **Handwash (ซักด้วยมือ)** - รอบการซักที่เบามากซึ่งอ่อนโยนเหมือนกับซักด้วยมือ **Air Wash (แอร์วอช)**- เหมาะสำหรับการขจัดกลิ่นอับ หมุน ปุ่มเลือกโปรแกรมซัก ตามโหมดการทำงานต่างๆ ต่อไปนี้ (Deodorization (ขจัดกลิ่น) → Sanitization (ขจัดเชื้อโรค)) • Deodorization (ขจัดกลิ่น) - ลดกลิ่นอับจากผ้า • Sanitization (ขจัดเชื้อโรค) - ขจัดกลิ่นอับและขจัดเชื้อโรคในผ้าด้วยการทำงานของแอร์วอชที่มีอุณหภูมิสูงขึ้น **Drying (อบแห้ง)** - เลือกโปรแกรมนี้เพื่ออบผ้าแห้งโดยอัตโนมัติ ด้วยการตรวจหาปริมาณและน้ำหนักผ้า **Daily Wash (ซักทุกวัน)** - ใช้สำหรับเสื้อผ้าที่ใช้ทุกวัน เช่น ชุดชั้นในและเสื้อเชิ้ต **Quick 29' (ซักเร็ว)** - สำหรับผ้าที่เปื้อนน้อยซึ่งคุณต้องการความรวดเร็วในการซัก **Spin (ปั่นหมาด)** - ปั่นหมาดเพิ่มเพื่อเอาน้ำออกจากผ้ามากขึ้น **Rinse + Spin (ล้าง + ปั่นหมาด)** - ใช้สำหรับผ้าที่ต้องการล้างเท่านั้น หรือเติมน้ำยาปรับผ้านุ่มที่เติมระหว่างการล้างผ้า **ระบายน้ำเท่านั้น - หมุน ปุ่มเลือกโปรแกรมซัก** ไปที่ตำแหน่งปั่นหมาด กดปุ่ม **Spin (ปั่นหมาด)** จากนั้นกดปุ่ม **Start/Pause (เริ่ม/พัก)** เพื่อระบายน้ำ

WD8704DJ-02696G_TH_CS3.indd 22 2009-12-29 12:09:02

3 ปุ่มเลือก แช่ผ้า	กดปุ่มนี้เพื่อเลือกแช่ผ้าก่อนซัก การแช่ผ้าก่อนซักสามารถใช้ได้กับ: ผ้าฝ้าย ผ้าใยสังเคราะห์ ผ้ายีนส์ ชุดกีฬา ซักทุกวัน
4 ปุ่มเลือกตั้งเวลาซักล่วงหน้า	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกการตั้งเวลาล่วงหน้าที่ใช้ได้ (ตั้งแต่ 3 ถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง
5 ปุ่มเลือกอุณหภูมิ	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกอุณหภูมิของน้ำ: (น้ำเย็น, 30 °C, 40 °C, 60 °C และ 95 °C)
6 ปุ่มเลือก ล้างน้ำ	กดปุ่มนี้เพื่อเพิ่มรอบการล้างน้ำ จำนวนรอบการล้างสูงสุดคือห้ารอบ
7 ปั่นหมาด	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกความเร็วในการปั่นหมาด WD8704: , , 400, 800, 1200, 1400 รอบต่อนาที WD8702: , , 400, 800, 1000, 1200 รอบต่อนาที "**ไม่ปั่นหมาด** " - ผ้าจะอยู่ในถังและไม่มีการปั่นหมาดหลังจากการระบายน้ำครั้งสุดท้าย "**Rinse Hold (หยุดการล้างน้ำ)** " -ผ้าจะแช่อยู่ในน้ำล้างรอบสุดท้าย ก่อนที่จะนำผ้าออกจากเครื่อง จะต้องมีการใช้โปรแกรม Drain (ทิ้งน้ำ) หรือ Spin (ปั่น) ก่อน
8 ปุ่ม อบแห้ง	กดปุ่มนี้เพื่อเลือกตัวเลือกดังต่อไปนี้ **Cup Board** (มาตรฐาน) → **Low Temp** (อุณหภูมิต่ำ) → **Iron** (รีดผ้า) → **Time Dry** (ตั้งเวลาอบแห้ง) (30 นาที → 1:00 นาที → 1:30 นาที → 2:00 นาที → 2:30 นาที → 3:00 นาที → 3:30 นาที → 4:00 นาที → 4:30 นาที) → **Cup Board (มาตรฐาน)** "**Cup Board (มาตรฐาน)** " - ใช้โปรแกรมนี้เพื่ออบแห้งผ้าฝ้าย ชุดชั้นใน และผ้าลินิน "**Low Temp (อุณหภูมิต่ำ)** " - ใช้โปรแกรมนี้เพื่อถนอมผ้าที่ไวต่อความร้อน โดยใช้อุณหภูมิการอบแห้งที่ต่ำ "**Iron (รีดผ้า)** " - สิ้นสุดรอบการอบแห้งโดยที่ผ้ายังชื้นและเหมาะกับการรีด "**Time Dry (ตั้งเวลาอบแห้ง)** " -อบผ้าแห้งตามเวลาที่ระบุ • โปรดหลีกเลี่ยงการซักผ้าที่ไม่สามารถอบแห้ง เนื่องจากอาจเสียรูปทรงแม้เมื่อใช้อุณหภูมิต่ำ • รอบ Cup Board (มาตรฐาน) Low Temp (อุณหภูมิต่ำ), Iron (รีดผ้า) และ Time Dry (ตั้งเวลาอบแห้ง) จะตรวจหาน้ำหนักของผ้าเพื่อแสดงเวลาในการอบแห้งที่ถูกต้อง • สภาพการอบแห้งอาจแตกต่างกันไปตามประเภทและปริมาณของผ้า
9 ปุ่มเลือก ซักมากเป็นพิเศษ	กดปุ่มนี้เมื่อผ้าเปื้อนมากและต้องการการซักล้างมากเป็นพิเศษ เวลาของรอบการซักจะเพิ่มขึ้นสำหรับแต่ละรอบ
10 ปุ่มโปรแกรมยับยั้งเชื้อโรค	จ่ายน้ำที่มีประจุเงินระหว่างรอบการล้างครั้งสุดท้าย ซึ่งจะช่วยขจัดแบคทีเรียและป้องกันการเติบโตของแบคทีเรีย เป็นเวลาหนึ่งเดือน
11 ปุ่มเลือก เริ่ม/พัก	กดปุ่มนี้เพื่อเริ่มต้นและหยุดโปรแกรมต่างๆ
12 ปุ่มเปิด/ปิด	กดปุ่มนี้หนึ่งครั้งเพื่อเปิดใช้เครื่องซักผ้า และกดอีกครั้งเพื่อปิดเครื่อง หากเครื่องซักผ้าถูกเปิดทิ้งไว้นานกว่า 10 นาทีโดยไม่มีการกดปุ่มใดๆ เครื่องจะปิดเองโดยอัตโนมัติ

WD8704DJ-02696G_TH_CS3.indd 23 2009-12-29 12:09:04

การซักผ้า

ล็อคป้องกันเด็ก

ฟังก์ชันล็อคป้องกันเด็กจะใช้ล็อคปุ่ม เพื่อป้องกันการเปลี่ยนรอบการซักที่คุณเลือกไว้

การเปิดใช้/การปิด

ถ้าคุณต้องการเปิดหรือปิดฟังก์ชันล็อคป้องกันเด็ก ให้กดปุ่ม **Temp.** (อุณหภูมิ) และ **Rinse** (ล้างน้ำ) พร้อมกันเป็นเวลา 3 วินาที "**Child Lock**" (ล็อคป้องกันเด็ก) จะสว่างขึ้นและเครื่องจะเปิดใช้ฟังก์ชันนี้

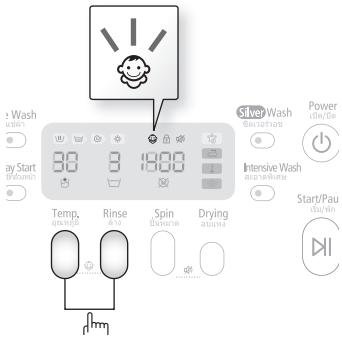

3 วินาที

ขณะที่ใช้ฟังก์ชันล็อคป้องกันเด็ก จะมีเพียงปุ่ม **Power** (เปิด/ปิด) เท่านั้นที่ใช้ได้ ฟังก์ชันล็อคป้องกันเด็กจะทำงานแม้ว่าจะเปิดหรือปิดเครื่อง หรือหลังจากถอดปลั๊กและเสียบปลั๊กใหม่

ปิดเสียง

สามารถเลือกฟังก์ชันปิดเสียงได้กับทุกโปรแกรม เมื่อมีการเลือกฟังก์ชันนี้ เสียงจะถูกปิดสำหรับทุกโปรแกรม แม้ว่าจะเปิดหรือปิดเครื่องซ้ำๆ การตั้งค่านี้ก็ยังคงทำงานอยู่

การเปิดใช้/การปิด

ถ้าคุณต้องการเปิดหรือปิดฟังก์ชันล็อคป้องกันเด็ก ให้กดปุ่ม **Spin** (ปั่นหมาด) และ **Drying** (อบแห้ง) พร้อมกันเป็นเวลา 3 วินาที "**Sound Off**" (ปิดเสียง) จะสว่างขึ้นบนแผงควบคุมเมื่อมีการเปิดใช้คุณลักษณะนี้

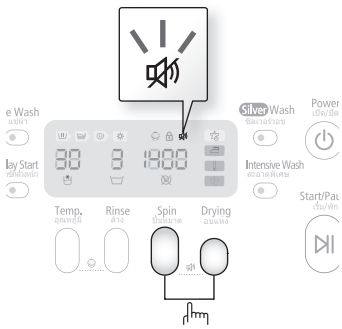

3 วินาที

ตั้งเวลาซักล่วงหน้า

คุณสามารถกำหนดให้เครื่องซักผ้าเสร็จในเวลาอื่นโดยอัตโนมัติ โดยเลือกได้ตั้งแต่ 3 ถึง 19 ชั่วโมง (เพิ่มได้ครั้งละ 1 ชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง

1. กำหนดเครื่องซักผ้าด้วยตนเองหรือซักอัตโนมัติตามประเภทของผ้าที่ซัก
2. กดปุ่ม **ตั้งเวลาซักล่วงหน้า** ซ้ำๆ เพื่อตั้งเวลา
3. กดปุ่ม **เริ่ม/พัก** เครื่องหมาย "**Delay Start**" (ตั้งเวลาซักล่วงหน้า) จะสว่างขึ้น และเครื่องจะนับถอยหลังจนกว่าจะถึงเวลาที่กำหนดไว้
4. ในการยกเลิกฟังก์ชันตั้งเวลาซักล่วงหน้า ให้กดปุ่ม **เปิด/ปิด** จากนั้นเปิดเครื่องอีกครั้ง

ระบายน้ำเท่านั้น

เมื่อคุณต้องการระบายน้ำออกจากเครื่องซักผ้าเพียงอย่างเดียว ให้ทำตามคำแนะนำด้านล่างนี้

1. กดปุ่ม **Power** (เปิด/ปิด)
2. หมุนปุ่มเลือกโปรแกรมซัก ไปที่ตำแหน่งปั่นหมาด
3. กดปุ่ม **Spin** (ปั่นหมาด) หนึ่งครั้งจนกระทั่งสัญญาณรอบต่อนาทีดับลง
4. และ "1" ปรากฏที่กลางจอแสดงผล
5. กดปุ่ม **Start/Pause (เริ่ม/พัก)**

WD8704DJ-02696G_TH_CS3.indd 24 2009-12-29 12:09:09

Air Wash (แอร์วอช)

ระบบ Air Wash (แอร์วอช) จะช่วยคืนความสดชื่นให้กับผ้าโดยไม่ต้องใช้น้ำ ด้วยระบบซักด้วยอากาศที่ทรงพลัง สามารถใช้กับผ้าชนิดต่างๆ เช่น โค้ทขนสัตว์ ผ้าฝ้าย หรือเสื้อไหมพรมและสูท [ไม่เกินสองชิ้น (น้อยกว่า 1 กิโลกรัม)]

1. เปิดประตู ใส่ผ้าในเครื่อง และปิดประตู
2. กดปุ่ม **เปิด/ปิด**
3. เลือก **Air Wash** (แอร์วอช) ด้วยการหมุน **ปุ่มเลือกโปรแกรมซัก**.
   - แต่ละครั้งที่กดปุ่ม โหมดการทำงานจะเลือกโหมดตามลำดับต่อไปนี้: Deodorization (ขจัดกลิ่น), Sanitization (ขจัดเชื้อโรค)...

โหมด	เวลาของรอบ
Deodorization (ขจัดกลิ่น)	29 นาที
Sanitization (ขจัดเชื้อโรค)	59 นาที

   - เมื่อเลือกตัวเลือกเหล่านี้ จะไม่สามารถเลือกปุ่มอื่น และคุณสามารถเลือกตั้งเวลาซักล่วงหน้าได้ระหว่าง: 3:00 – 19:00
4. ปิดประตูและกดปุ่ม **Start/Pause** (เริ่ม/พัก)

- เมื่อมีน้ำในถังซัก จะไม่สามารถเลือก **Air wash** (แอร์วอช) ได้ โปรดระบายน้ำในถังและเลือก **Air Wash** (แอร์วอช)
- กดปุ่ม **Start/Pause** (เริ่ม/พัก) หรือปุ่ม **Power** (เปิด/ปิด) เพื่อเอาผ้าออก
- สามารถใช้แผ่นหอมร่วมกับโปรแกรม Air Wash (แอร์วอช) เพื่อเพิ่มความหอมให้กับผ้า (หนึ่งแผ่นต่อผ้าหนึ่งหรือสองชิ้น)

หลีกเลี่ยงการใช้ Air Wash (แอร์วอช) กับผ้าต่อไปนี้:

- ผ้าที่มีความละเอียดอ่อน ทำจากหนัง มิงค์ ขนเฟอร์ ไหม ฯลฯ
- ชุดชั้นในที่มีลูกไม้ การบุที่ใช้ 'กาว' และชุดที่อาจมีเครื่องประดับหลุดร่วงได้
- ผ้าที่มีกระดุมอาจเสี่ยงต่อปัญหากระดุมแตก
- ผ้าที่ลงแป้งอาจเสียรูป
- ผ้าปูที่นอนที่แข็ง เช่น หมอนไม้ (ที่พักคอ)
  - หมอนหรือผ้าห่มที่มีพลาสติกหรือวัสดุอื่นที่ไม่ใช่ผ้าย
  - ผ้าห่มไฟฟ้า
- ผ้าห่มขนสัตว์
- ผ้าห่มนวม
- หมอนยาง

WD8704DJ-02696G_TH_CS3.indd 25 2009-12-29 12:09:09

การซักผ้า

การใช้โปรแกรมอบแห้ง

ดูฉลากสำหรับการอบแห้ง และตรวจสอบว่าใส่ผ้าให้ต่ำกว่าระดับของขีดสำหรับผ้าแห้ง 3.5 กก.

1. เปิดฝาเครื่อง ใส่ผ้าและปิดฝาเครื่อง
2. กดปุ่ม **Power** (เปิด/ปิด) และกด **Drying** (อบแห้ง)
   : เครื่องจะเลือกโปรแกรมมาตรฐานโดยอัตโนมัติ
   สามารถใช้การอบแห้งได้เฉพาะกับบางโปรแกรม เช่น ผ้าฝ้าย ผ้าใยสังเคราะห์ ผ้ายีนส์ และชุดกีฬา
3. เลือก **Drying** (อบแห้ง) ดังนี้
   โปรแกรมอบแห้ง

   - เมื่อกดปุ่มแต่ละครั้งจะเป็นการเลือกประเภทการอบแห้งตามลำดับดังนี้:
     Cup Board (มาตรฐาน) → **Low Temp** (อุณหภูมิต่ำ) → **Iron** (รีดผ้า) → **Time Dry** (ตั้งเวลาอบแห้ง) (30 นาที → 1:00 นาที → 1:30 นาที → 2:00 นาที → 2:30 นาที → 3:00 นาที → 3:30 นาที → 4:00 นาที → 4:30 นาที) → **Cup Board (มาตรฐาน)**

ประเภทการอบแห้ง		ข้อมูล	น้ำหนักสูงสุด	เวลา (น้ำหนักสูงสุด)
การอบแห้งอัตโนมัติ	Cupboard (มาตรฐาน) ( )	มาตรฐาน: อบผ้าแห้ง	3.5 กก.	160 นาที
	Low Temp (อุณหภูมิต่ำ) ( )	อบผ้าแห้งโดยใช้อุณหภูมิต่ำเพื่อถนอมเนื้อผ้า	2.0 กก.	160 นาที
	Iron (รีดผ้า) ( )	อบให้ผ้าหมาดเพื่อให้สามารถรีดง่าย	2.0 กก.	30 นาที
Time Dry (ตั้งเวลาอบแห้ง) ( )		คุณสามารถเลือกเวลาอบแห้งที่ต้องการตามเนื้อผ้า ปริมาณ และความชื้น	3.5 กก.	270 นาที

   - เครื่องจะแสดงเวลาอบแห้งโดยอัตโนมัติ ด้วยการตรวจสอบน้ำหนักผ้าก่อนที่จะอบเพื่อเพิ่มประสิทธิภาพของการอบ
   - สำหรับผ้าที่หนักน้อยกว่า 3.5 กก. ให้ใช้การอบแห้งอัตโนมัติ สำหรับผ้าที่หนักมากกว่านั้น ให้ใช้การตั้งเวลาอบแห้ง
   - ถ้าเลือกทั้งโปรแกรมปั่นหมาดและอบแห้ง ความเร็วของการปั่นหมาดจะถูกเลือกโดยอัตโนมัติเพื่อปรับปรุงประสิทธิภาพของการอบแห้ง
   - เมื่อใช้โปรแกรมอบแห้ง ให้ตรวจสอบว่าวาล์วจ่ายน้ำเปิดอยู่
4. เติมสารซักฟอกและน้ำยาปรับผ้านุ่มในปริมาณที่เหมาะสมในช่องใส่ และปิดช่องใส่
5. กดปุ่ม **Start/Pause** (เริ่ม/พัก)
   : เครื่องจะกำหนดการทำงานที่เหมาะสม จากการตรวจจับน้ำหนักของผ้า
   - ไม่สามารถแก้ไขโปรแกรมที่เลือกได้ หลังจากเริ่มต้นการอบแห้ง
   - ถ้าคุณเลือกฟังก์ชันอบแห้ง ความเร็วของการปั่นหมาดจะถูกตั้งค่าเป็น สูง เพื่อเพิ่มประสิทธิภาพของการอบแห้ง
   - ถ้าไม่มีการจ่ายน้ำเย็น การอบแห้งจะไม่ทำงาน
   - ถ้าไม่นำผ้าออกจากถังหลังจากสิ้นสุดการอบแห้ง ฟังก์ชันป้องกันผ้ายับจะทำงานเป็นเวลา 30 นาที พร้อมกับแสดง [End] ในการนำผ้าออก: กดปุ่ม Start/Pause (เริ่ม/พัก) หรือ Power (เปิด/ปิด) และนำผ้าออก
   - ถ้าคุณต้องการอบผ้าหลังจากซักมือ ให้เลือกทั้งปั่นหมาดและอบแห้งพร้อมกัน

WD8704DJ-02696G_TH_CS3.indd 26 2009-12-29 12:09:09

การซักโดยใช้ปุ่มเลือกโปรแกรมซัก

เครื่องซักผ้าของคุณทำให้งานซักกลายเป็นเรื่องง่าย ด้วยระบบควบคุมอัตโนมัติ "ฟัซซี่คอนโทรล" ของ Samsung เมื่อคุณเลือกโปรแกรมซัก เครื่องจะกำหนดอุณหภูมิ เวลาซัก และความเร็วในการซักให้

1. เปิดก๊อกน้ำที่อ่างซักล้าง
2. กดปุ่ม **เปิด/ปิด**
3. เปิดประตู
4. ใส่ผ้าครั้งละชิ้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. เติมผงซักฟอก น้ำยาปรับผ้านุ่ม และน้ำยาแช่ผ้า (ถ้าจำเป็น) ในช่องที่เหมาะสม

Pre Wash (แช่ผ้า) จะใช้ได้เฉพาะเมื่อเลือกรอบการซักของ Cotton (ผ้าฝ้าย) Synthetics (ผ้าใยสังเคราะห์) Sports Wear (ชุดกีฬา) Daily Wash (ซักทุกวัน) และจำเป็นเฉพาะกรณีที่ผ้าเปื้อนมากเท่านั้น

7. ใช้ **ปุ่มเลือกโปรแกรมซัก** เพื่อเลือกโปรแกรมซักที่เหมาะสมตามประเภทเนื้อผ้า: Cotton (ผ้าฝ้าย) Synthetics (ผ้าใยสังเคราะห์) Denim (ผ้ายีนส์) Sports Wear (ชุดกีฬา) Delicates (ถนอมผ้า) Wool (ผ้าขนสัตว์) Hand Wash (ซักมือ) Daily Wash (ซักทุกวัน) Quick 29' (ซักเร็ว) สัญญาณที่เกี่ยวข้องจะสว่างในแผงควบคุม
8. ในขั้นตอนนี้ คุณจะสามารถควบคุมอุณหภูมิการซัก ปริมาณการล้างน้ำ ความเร็วในการปั่น ตั้งเวลาซัก โดยกดปุ่มตัวเลือกที่ต้องการ
9. กดปุ่ม **Start/Pause** (เริ่ม/พัก) และเครื่องจะเริ่มต้นการซัก สัญลักษณ์ของขั้นตอนการซักจะสว่างขึ้น และเวลาที่เหลือของรอบการซักจะปรากฏในจอแสดงผล

ตัวเลือกการหยุด

ภายใน 5 นาทีนับจากเริ่มต้นการซัก คุณยังสามารถเพิ่มหรือนำผ้าออกได้

1. กดปุ่ม **เริ่ม/พัก** เพื่อปลดล็อคประตู

คุณจะไม่สามารถเปิดประตูได้อีก เมื่อน้ำร้อนเกินไป หรือระดับน้ำสูงเกินไป

2. หลังจากปิดประตู ให้กดปุ่ม **เริ่ม/พัก** เพื่อเริ่มต้นการซักอีกครั้ง

เมื่อสิ้นสุดรอบการซัก:

เมื่อสิ้นสุดรอบการซักทั้งหมด เครื่องจะปิดเองโดยอัตโนมัติ

1. เปิดประตู
2. นำผ้าออกจากเครื่อง

การซักด้วยตนเอง

คุณสามารถซักผ้าด้วยตนเองโดยไม่ใช้ปุ่มเลือกโปรแกรมซักได้

1. เปิดท่อจ่ายน้ำ
2. กดปุ่ม **เปิด/ปิด** ที่เครื่องซักผ้า
3. เปิดประตู
4. ใส่ผ้าครั้งละชิ้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. ใส่ผงซักฟอก และถ้าจำเป็น ใส่น้ำยาปรับผ้านุ่ม น้ำยาแช่ผ้าก่อนซักในช่องที่เหมาะสม
7. กดปุ่ม **Temp.** (อุณหภูมิ) เพื่อเลือกอุณหภูมิ (น้ำเย็น, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. กดปุ่ม **ล้าง** เพื่อเลือกจำนวนรอบการล้างที่ต้องการ
   จำนวนรอบการล้างสูงสุดคือห้ารอบ
   ระยะเวลาการซักจะเพิ่มขึ้นตามที่กำหนด
9. กดปุ่ม **ปั่นหมาด** เพื่อเลือกความเร็วในการปั่น
   โปรแกรมหยุดการล้างน้ำจะช่วยให้คุณนำผ้าที่ไม่แห้งหมาดออกจากเครื่องได้ (: No Spin (ไม่ปั่นหมาด) : Rinse Hold (หยุดการล้างน้ำ))
10. กดปุ่ม **Delay Start** (ตั้งเวลาซักล่วงหน้า) ซ้ำๆ เพื่อเลือกตัวเลือกเวลาเริ่มต้นที่ใช้ได้ (ตั้งแต่ 3 ชั่วโมงถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง
11. กดปุ่ม **เริ่ม/พัก** และเครื่องจะเริ่มต้นการซัก

WD8704DJ-02696G_TH_CS3.indd 27 2009-12-29 12:09:09

การซักผ้า

คำแนะนำของผ้า

ทำตามคำแนะนำง่ายๆ เพื่อให้ได้ผ้าสะอาด และการซักที่มีประสิทธิภาพ

ตรวจสอบฉลากการดูแลผ้าเสมอก่อนที่จะซัก

แยกผ้าตามประเภทของเนื้อผ้า ดังนี้:

- ฉลากดูแลผ้า: แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าใยสังเคราะห์ ผ้าไหม ผ้าขนสัตว์ และเรยอน
- สี: แยกผ้าเป็นผ้าสีและผ้าขาว โปรดซักผ้าใหม่ที่เป็นผ้าสีแยกต่างหาก
- ขนาด: การใส่ผ้าขนาดต่างๆ กันในการซักจะทำให้การซักมีประสิทธิภาพดีขึ้น
- ความบอบบาง: ซักผ้าบางแยกต่างหาก ใช้โปรแกรมถนอมผ้าสำหรับผ้าขนสัตว์ใหม่ ผ้าม่าน และผ้าไหม ตรวจสอบป้ายของผ้าที่ซัก หรือดูผังการดูแลผ้าในภาคผนวก

นำสิ่งของออกจากกระเป๋า

ก่อนการซักแต่ละครั้ง ให้นำสิ่งของออกจากประเป๋าของผ้าก่อน ของแข็งขนาดเล็กที่มีรูปร่างต่างๆ เล่น เหรียญ มีด เข็มหมุด และคลิปหนีบกระดาษอาจทำให้เครื่องซักผ้าเสียหาย ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่

โลหะบนเสื้อผ้าอาจทำให้เกิดความเสียหายกับผ้าและถังซักได้ กลับผ้าที่มีกระดุมและเสื้อผ้าที่มีลายปักก่อนที่จะซัก ถ้าไม่รูดซิปกางเกงปิดไว้ขณะซัก ถังปั่นอาจเสียหายได้ โปรดรูปซิปปิดไว้ก่อนที่จะซักผ้า

เสื้อผ้าที่มีเชือกยาวอาจพันกับผ้าชิ้นอื่น และอาจทำให้ผ้าเสียหาย โปรดมัดเชือกไว้ก่อนที่จะซัก โปรดมัดเชือกไว้ก่อนที่จะซักผ้า

การแช่ผ้าฝ้าย

เครื่องซักผ้าของคุณ เมื่อใช้ร่วมกับผงซักฟอกชนิดใหม่ๆ จะสามารถให้ผลการซักที่ดีเยี่ยม พร้อมทั้งประหยัดพลังงาน เวลา น้ำและผงซักฟอก แต่หากผ้าฝ้ายสกปรกมาก คุณสามารถใช้การแช่ผ้ากับผงซักฟอกชนิดโปรตีน

การพิจารณาปริมาณผ้าที่จะซัก

โปรดอย่าใส่ผ้ามากเกินไปในเครื่อง เนื่องจากจะทำให้ผ้าไม่สะอาด โปรดใช้ผังด้านล่างนี้เพื่อพิจารณาปริมาณผ้าที่จะซัก สำหรับประเภทของเนื้อผ้าที่ซัก

ประเภทของผ้า	ปริมาณผ้า
รุ่น	WD8704/ WD8702
ผ้าฝ้าย -เปื้อนปานกลาง/น้อย - เปื้อนมาก	7.0 กก.
ผ้าใยสังเคราะห์	3.0 กก.
Denim (ยีนส์)	3.0 กก.
Sports Wear (ชุดกีฬา)	2.5 กก.
ถนอมผ้า	2.5 กก.
ผ้าขนสัตว์	2.0 กก.

- เมื่อผ้าไม่สมดุล (“**UE**” สว่างในจอแสดงผล) ให้กระจายชิ้นผ้าให้เสมอกัน
  ถ้าผ้าไม่สมดุล ประสิทธิภาพในการปั่นหมาดจะลดลง
- เมื่อซักชุดเครื่องนอนหรือผ้านวม เวลาในการซักอาจนานขึ้น และประสิทธิภาพในการปั่นหมาดจะลดลง

โปรดใส่ชุดชั้นในสตรี (ซักน้ำได้) ลงในถุงใส่ผ้าสำหรับซัก (ต้องซื้อเพิ่ม)

- ส่วนที่เป็นเหล็กของชุดชั้นในสตรีอาจทำให้วัสดุแตกหักและทำความเสียหายแก่เสื้อผ้าได้ ดังนั้นโปรดใส่ชุดชั้นในลงในถุงใส่ผ้าสำหรับซัก
- เสื้อผ้าชิ้นเล็กและมีน้ำหนักเบา เช่น ถุงเท้า ถุงมือ ถุงน่อง และผ้าเช็ดหน้า อาจติดอยู่บริเวณประตู โปรดใส่เสื้อผ้าเหล่านี้ไว้ในถุงใส่ผ้าสำหรับซัก

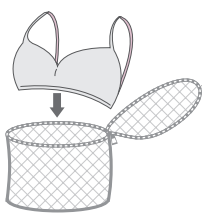

ข้อควรระวัง อย่าซักถุงใส่ผ้าเพียงอย่างเดียวโดยไม่มีผ้าอื่น เนื่องจากอาจทำให้เกิดการสั่นสะเทือนที่ทำให้เครื่องซักผ้าเคลื่อนที่ และอาจทำให้เกิดอุบัติเหตุ

WD8704DJ-02696G_TH_CS3.indd 28 2009-12-29 12:09:10

ข้อมูลผงซักฟอกและสารเพิ่มเติมต่าง ๆ

ควรใช้ผงซักฟอกแบบใด

ประเภทของผงซักฟอกที่จะใช้นั้นขึ้นอยู่กับเนื้อผ้า (ผ้าฝ้าย ผ้าสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก ระดับความสกปรก โปรดใช้ผงซักฟอกชนิด "ฟองน้อย" ซึ่งได้รับการออกแบบสำหรับเครื่องซักผ้าอัตโนมัติ
ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ความสกปรก และความกระด้างของน้ำ หากคุณไม่ทราบว่าน้ำที่ใช้กระด้างมากเพียงใด โปรดติดต่อผู้ให้บริการน้ำประปาในพื้นที่

ห้ามใช้ผงซักฟอกที่เกาะตัวหรือแข็ง เนื่องจากผงซักฟอกอาจค้างอยู่ในรอบการซัก และทำให้เครื่องซักผ้าไม่สามารถล้างน้ำให้สะอาด และทำให้ช่องระบายน้ำล้นอุดตัน

โปรดระลึกถึงสิ่งต่อไปนี้เมื่อใช้โปรแกรมผ้าขนสัตว์

- ใช้ผงซักฟอกที่มีฤทธิ์เป็นกลาง
- เมื่อใช้ผงซักฟอกชนิดผง อาจมีส่วนที่ตกค้างอยู่บนผ้าและทำให้เนื้อผ้า (ขนสัตว์) เสียหาย

ช่องใส่ผงซักฟอก

เครื่องซักผ้าของคุณมีช่องแยกสำหรับจ่ายผงซักฟอกและน้ำยาปรับผ้านุ่ม เติมสารเพิ่มเติมในช่องที่ถูกต้องก่อนที่จะเริ่มต้นเครื่องซักผ้า

ห้ามเปิดช่องใส่ผงซักฟอกขณะที่เครื่องทำงาน

1. ดึงช่องใส่ผงซักฟอกทางซ้ายของแผงควบคุมออก
2. เติมผงซักฟอกตามปริมาณที่แนะนำ ในช่องใส่ผงซักฟอก Ⅱ ก่อนที่จะเริ่มต้นใช้เครื่องซักผ้า
3. เติมน้ำยาปรับผ้านุ่มตามปริมาณที่แนะนำในช่องสำหรับใส่น้ำยาปรับผ้านุ่ม ❀ ถ้าต้องการ
4. เมื่อใช้ตัวเลือกการแช่ผ้า ให้เพิ่มผงซักฟอกในปริมาณที่แนะนำในช่องสำหรับแช่ผ้า Ⅰ

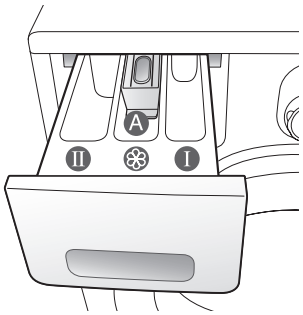

เมื่อซักผ้าชิ้นใหญ่ โปรดอย่าใช้ผงซักฟอกประเภทต่อไปนี้

- ผงซักฟอกชนิดเม็ดและแคปซูล
- ผงซักฟอกที่ใช้บอลและตาข่าย

น้ำยาปรับผ้านุ่มชนิดเข้มข้นจะต้องมีการเจือจางด้วยน้ำสะอาด ก่อนที่จะเทลงในช่องใส่ (เพื่อไม่ให้ช่องทางไหลอุดตัน)

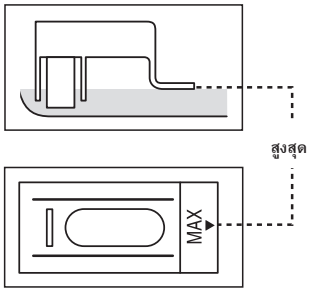

WD8704DJ-02696G_TH_CS3.indd 29 2009-12-29 12:09:11

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การรักษาความสะอาดของเครื่องซักผ้าจะช่วยเพิ่มประสิทธิภาพของเครื่อง หลีกเลี่ยงการซ่อมบำรุงที่ไม่จำเป็น และยืดอายุการใช้งาน

การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน

1. ถอดปลั๊กของเครื่องซักผ้า
2. เปิดฝาตัวกรองโดยใช้เหรียญหรือกุญแจ

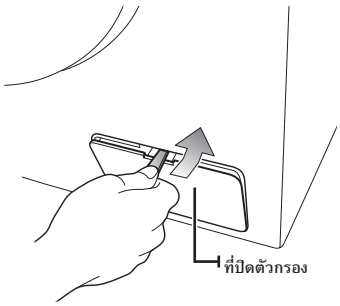

3. ไขสกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย

4. ยึดฝาที่ปลายของท่อน้ำทิ้งฉุกเฉิน และค่อยๆ ดึงออกมาประมาณ 15 ซม.
5. ปล่อยให้น้ำไหลลงในอ่าง
6. สอดท่อเข้าที่ และไขฝาปิดเข้าที่
7. ปิดฝาครอบของตัวกรอง

การทำความสะอาดภายนอก

1. เช็ดผิวด้านนอกของเครื่องซักผ้า รวมถึงแผงควบคุม ด้วยผ้านุ่มและผงซักฟอกที่ไม่มีสารขัดถู
2. ใช้ผ้านุ่มเช็ดให้แห้ง
3. ห้ามเทน้ำบนเครื่องซักผ้า

WD8704DJ-02696G_TH_CS3.indd 30 2009-12-29 12:09:12

การทำความสะอาดช่องใส่และที่พักผงซักฟอก

1. กดสลักคลายที่ด้านในของที่ใส่ผงซักฟอก และดึงออก
2. ถอดที่แบ่งน้ำยาซักผ้าออกจากช่องใส่ผงซักฟอก

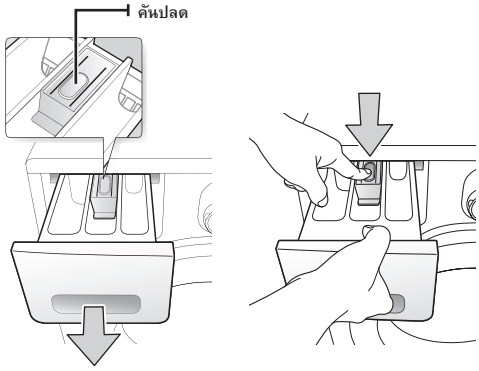

3. ล้างทุกส่วนด้วยน้ำสะอาดที่ไหล

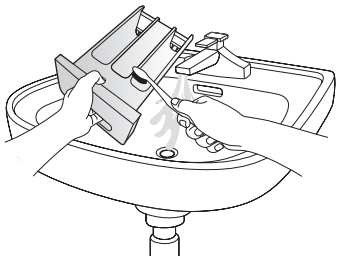

4. ล้างที่พักผงซักฟอกด้วยแปรงสีฟันเก่า
5. ใส่ที่แบ่งน้ำยาซักฟ้าชนิดเหลวด้วยการดันเข้าที่ให้แน่น
6. ดันช่องใส่เข้าที่
7. ถ้าต้องการขจัดผงซักฟอกที่หลงเหลือ ให้ใช้โปรแกรมล้างน้ำโดยไม่ต้องมีผ้าในถัง

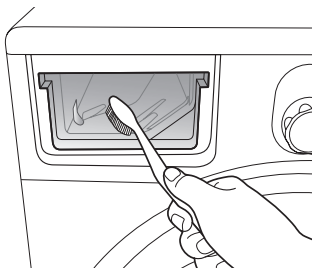

การทำความสะอาดตัวกรองเศษผ้า

เราขอแนะนำให้ทำความสะอาดตัวกรองเศษผ้า 5 หรือ 6 ครั้งต่อปี หรือเมื่อข้อความ "**5E**" ปรากฏ (โปรดดูที่ "การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน" ในหน้าก่อน)

1. เปิดฝาตัวกรองโดยใช้เหรียญหรือกุญแจ
2. ไขสกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย เพื่อทิ้งน้ำให้หมด
3. ไขตัวกรองเศษผ้าออก

4. ล้างเศษฝุ่นละอองหรือวัสดุอื่นออกจากตัวกรองเศษผ้า ตรวจสอบว่าใบพัดของปั๊มน้ำทิ้งที่ด้านหลังของตัวกรองไม่อุดตัน
5. ปิดฝาของตัวกรองเศษผ้า
6. ปิดฝาครอบของตัวกรอง

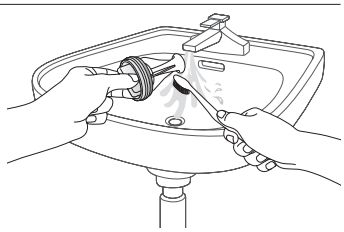

WD8704DJ-02696G_TH_CS3.indd 31 2009-12-29 12:09:15

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การทำความสะอาดตัวกรองท่อจ่ายน้ำ

คุณควรทำความสะอาดตัวกรองของท่อจ่ายน้ำอย่างน้อยปีละครั้ง หรือเมื่อมีข้อความ "**4E**" ปรากฏขึ้น:

1. ปิดน้ำที่จ่ายเข้าสู่เครื่องซักผ้า
2. ไขท่อออกจากด้านหลังของเครื่องซักผ้า เพื่อป้องกันไม่ให้น้ำไหลออกเนื่องจากแรงดันอากาศในท่อ ให้ใช้ผ้าปิดปลายท่อไว้
3. ใช้คีมจับตะแกรงตัวกรองออกจากปลายของท่อ และล้างด้วยน้ำสะอาด นอกจากนี้ ให้ทำความสะอาดด้านนอกและด้านในของข้อต่อที่เป็นเกลียวด้วย
4. ดันตัวกรองเข้าที่
5. ไขท่อเข้ากับเครื่องซักผ้าดังเดิม
6. ตรวจสอบว่าไม่มีน้ำรั่วและเปิดก๊อก

การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว

หากอุณหภูมิต่ำกว่าจุดเยือกแข็ง และน้ำในเครื่องซักผ้ากลายเป็นน้ำแข็ง ให้ทำดังนี้

1. ถอดปลั๊กของเครื่องซักผ้า
2. เทน้ำอุ่นที่ก๊อกจ่ายน้ำ เพื่อให้ท่อจ่ายน้ำหลวม
3. ถอดท่อจ่ายน้ำ และแช่ในน้ำอุ่น
4. เทน้ำอุ่นในถังซักของเครื่องซักผ้า และทิ้งไว้ประมาณ 10 นาที
5. ต่อท่อจ่ายน้ำเข้าที่ และตรวจสอบว่าการจ่ายน้ำและการทิ้งน้ำเป็นปกติ

การจัดเก็บเครื่องซักผ้า

ถ้าคุณจำเป็นต้องจัดเก็บเครื่องซักผ้าเป็นเวลานาน คุณควรระบายน้ำออกและถอดปลั๊กและท่อน้ำ เครื่องซักผ้าอาจได้รับความเสียหายถ้ามีน้ำค้างอยู่ในท่อและองค์ประกอบภายใน ในระหว่างที่จัดเก็บ

1. เลือกโปรแกรม Quick 29' (ซักเร็ว) และเติมสารฟอกในช่องสารฟอก ให้เครื่องซักผ้าทำงานโดยไม่ต้องใส่ผ้า
2. ปิดก๊อกน้ำและถอดท่อจ่ายน้ำ
3. ถอดปลั๊กเครื่องซักผ้าจากเต้าเสียบไฟฟ้า และเปิดประตูเครื่องทิ้งไว้เพื่อให้อากาศหมุนเวียน

ถ้าเครื่องซักผ้าของคุณมีการจัดเก็บในอุณหภูมิต่ำกว่าจุดเยือกแข็ง โปรดรอให้น้ำที่ตกค้างในเครื่องละลายก่อนที่จะใช้งานอีกครั้ง

WD8704DJ-02696G_TH_CS3.indd 32 2009-12-29 12:09:15

การแก้ไขปัญหาและรหัสข้อมูล

ตรวจสอบสิ่งต่อไปนี้ถ้าเครื่องซักผ้าของคุณ...

ปัญหา	การแก้ไข
ไม่ทำงาน	• ตรวจสอบว่าเครื่องซักผ้าเสียบปลั๊กเรียบร้อย • ตรวจสอบว่าประตูปิดสนิท • ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ • โปรดตรวจสอบว่าได้กดปุ่ม เริ่ม/พัก แล้ว
ไม่มีน้ำหรือน้ำไม่เพียงพอ	• เปิดก๊อกน้ำจนสุด • ตรวจสอบว่าท่อจ่ายน้ำไม่จับตัวเป็นน้ำแข็ง • ยืดให้ท่อจ่ายน้ำตรง • ทำความสะอาดตัวกรองที่ท่อจ่ายน้ำ
มีผงซักฟอกหลงเหลือในช่องใส่หลังจากการซัก	• ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ตรวจสอบว่าได้เติมผงซักฟอกในช่องกลางของที่ใส่
สั่นสะเทือนหรือมีเสียงดัง	• ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่ซึ่งราบเสมอกัน หากพื้นที่ไม่ราบเสมอกัน ให้ปรับขาตั้งของเครื่องให้ได้ระดับ • ตรวจสอบว่านำหมุดสำหรับการขนส่งออกแล้ว • ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น • ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล
เครื่องซักผ้าไม่ทิ้งน้ำ และ/หรือปั่นหมาด	• ทำให้ท่อน้ำทิ้งตรง จัดให้ท่อไม่บิดงอ • ตรวจสอบว่าตัวกรองเศษผ้าไม่อุดตัน
ประตูล็อคและไม่สามารถเปิดได้	• ฝาเครื่องจะไม่สามารถเปิดได้จนกว่าจะครบ 3 นาทีหลังจากที่เครื่องหยุดการทำงานหรือมีการปิดเครื่อง

ถ้าปัญหาเหล่านี้ยังคงอยู่ โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ใกล้บ้าน

WD8704DJ-02696G_TH_CS3.indd 33 2009-12-29 12:09:15

การแก้ไขปัญหาและรหัสข้อมูล

รหัสข้อมูล

เมื่อเครื่องซักผ้าทำงานผิดปกติ คุณอาจพบรหัสข้อมูลในจอแสดงผล ในกรณีนี้ ให้ตรวจสอบตารางต่อไปนี้และลองใช้วิธีแก้ไขที่แนะนำก่อนที่จะติดต่อฝ่ายบริการลูกค้า

สัญลักษณ์ของรหัส	การแก้ไข
dE	• ปิดประตู
4E	• ตรวจสอบว่าเปิดก๊อกจ่ายน้ำแล้ว • ตรวจสอบแรงดันน้ำ
5E	• ทำความสะอาดตัวกรองเศษผ้า • ตรวจสอบว่าท่อระบายน้ำได้รับการติดตั้งอย่างเหมาะสม
UE	• ผ้าไม่สมดุล ให้คลายผ้าที่พันกันออก หากมีการซักผ้าเพียงชิ้นเดียว เช่น เสื้อคลุมอาบน้ำหรือกางเกงยีนส์ การปั่นครั้งสุดท้ายอาจไม่ได้ผลดีเท่าที่ควร และข้อความแสดงข้อผิดพลาด “UE” จะปรากฏในจอแสดงผล
cE/3E	• ติดต่อฝ่ายบริการหลังการขาย
Hot	• จะปรากฏเมื่ออุณหภูมิภายในถังซักสูง พัดลมจะทำงานโดยอัตโนมัติ ดังนั้นโปรดรอให้สัญญาณ “**Hot**” หายไป

สำหรับรหัสที่ไม่ปรากฏข้างต้น หรือถ้าคำแนะนำใช้ไม่ได้ผล โปรดติดต่อศูนย์บริการของ Samsung หรือตัวแทนจำหน่าย Samsung ใกล้บ้าน

WD8704DJ-02696G_TH_CS3.indd 34 2009-12-29 12:09:15

ผังโปรแกรม

ผังโปรแกรม

(● ตัวเลือกสำหรับผู้ใช้)

โปรแกรม	น้ำหนักสูงสุด (กก.)	ผงซักฟอก			โปรแกรมยับยั้งเชื้อโรค	อุณหภูมิสูงสุด (°C)
	WD8704/ WD8702	แช่ผ้า	ซัก	น้ำยาปรับผ้านุ่ม		
ผ้าฝ้าย	7.0	●	ใช่	●	●	95
ผ้าใยสังเคราะห์	3.0	●	ใช่	●	●	60
Denim (ยีนส์)	3.0	●	ใช่	●	●	60
Sports Wear (ชุดกีฬา)	2.5	●	ใช่	●	●	60
ถนอมผ้า	2.5	-	ใช่	-	-	40
ผ้าขนสัตว์	2.0	-	ใช่	-	-	40
ซักมือ	2.0	-	ใช่	●	-	40
Deodorization (ขจัดกลิ่น)	1.0	-	-	-	-	-
Sanitization (ขจัดเชื้อโรค)	1.0	-	-	-	-	-
ทำผ้าแห้ง	3.5	-	-	-	-	-
Daily Wash (ซักทุกวัน)	3.0	●	ใช่	●	●	60
Quick 29' (ซักเร็ว 29 นาที)	3.0	-	ใช่	●	-	60

โปรแกรม	ความเร็วในการปั่น (สูงสุด) รอบต่อนาที		ตั้งเวลาซักล่วงหน้า	เวลาของรอบ (นาที)
	WD8704	WD8702		
ผ้าฝ้าย	1400	1200	●	120
ผ้าใยสังเคราะห์	1200	1200	●	90
Denim (ยีนส์)	800	800	●	78
Sports Wear (ชุดกีฬา)	1200	1200	●	72
ถนอมผ้า	800	800	●	50
ผ้าขนสัตว์	800	800	●	38
ซักมือ	400	400	●	31
Deodorization (ขจัดกลิ่น)	-	-	●	29
Sanitization (ขจัดเชื้อโรค)	-	-	●	59
ทำผ้าแห้ง	-	-	●	160
Daily Wash (ซักทุกวัน)	1200	1200	●	70
Quick 29' (ซักเร็ว 29 นาที)	1400	1200	●	29

1. โปรแกรมที่มีการแช่ผ้าจะใช้เวลานานขึ้นประมาณ 15 นาที
2. ข้อมูลระยะเวลาของโปรแกรมได้รับการวัดตามเงื่อนไขที่ระบุในมาตรฐาน IEC 60456 / EN 60456
3. เวลาของโปรแกรมในแต่ละบ้านอาจต่างจากค่าที่ระบุในตาราง เนื่องจากแรงดันและอุณหภูมิของน้ำ ปริมาณผ้า และประเภทของผ้า
4. เมื่อมีการเลือกฟังก์ชัน Intensive Wash (ซักมากเป็นพิเศษ) เวลาของรอบจะเพิ่มขึ้นสำหรับแต่ละรอบ

WD8704DJ-02696G_TH_CS3.indd 35 2009-12-29 12:09:15

ภาคผนวก

ผังการดูแลผ้า

สัญลักษณ์ต่อไปนี้เป็นคำแนะนำในการดูแลผ้า ฉลากการดูแลผ้าประกอบด้วยสัญลักษณ์สี่อย่างตามลำดับ: การซัก การฟอกขาว การอบแห้ง และการรีด ตลอดจนการซักแห้ง ถ้าจำเป็น
การใช้สัญลักษณ์ช่วยให้มีความสม่ำเสมอระหว่างผู้ผลิตเสื้อผ้าแต่ละรายทั้งสำหรับผ้าในประเทศและผ้าที่นำเข้า โปรดปฏิบัติตามฉลากการดูแลเพื่อยืดอายุการใช้งานของผ้าและลดปัญหาในการซัก

	ผ้าหนา		สามารถรีดที่ความร้อนสูงสุด 100 ˚C
	ผ้าบาง		ห้ามรีด
	สามารถซักได้ที่ความร้อน 95 ˚C		ซักแห้งด้วยสารทำละลายใดก็ได้
	ซักได้ที่ความร้อน 60 ˚C		ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ก แอลกอฮอล์ หรือ R113 เท่านั้น
	ซักได้ที่ความร้อน 40 ˚C		ซักแห้งด้วยน้ำมันก๊าด แอลกอฮอล์ หรือ R113 เท่านั้น
	ซักได้ที่ความร้อน 30 ˚C		ห้ามซักแห้ง
	ซักด้วยมือ		ห้ามแขวน
	ซักแห้งเท่านั้น		แขวนได้
	ใช้สารฟอกในน้ำเย็น		ตากด้วยไม้แขวนเสื้อ
	ห้ามใช้สารฟอก		ใช้เครื่องอบ ความร้อนปกติ
	สามารถรีดที่ความร้อนสูงสุด 200 ˚C		ใช้เครื่องอบ ความร้อนต่ำ
	สามารถรีดที่ความร้อนสูงสุด 150 ˚C		ห้ามใช้เครื่องอบ

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากคุณต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟ เพื่อป้องกันไม่ให้มีการต่อสายไฟกับเครื่องใช้ไฟฟ้านี้อีก ถอดประตูออก เพื่อป้องกันไม่ให้สัตว์หรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารขจัดคราบและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

ประกาศเกี่ยวกับมาตรฐาน

อุปกรณ์นี้เป็นไปตามมาตรฐานความปลอดภัยของยุโรป EC directive 93/68 และ EN Standard 60335

WD8704DJ-02696G_TH_CS3.indd 36 2009-12-29 12:09:26

ข้อมูลจำเพาะ

ประเภท			เครื่องซักผ้าฝาหน้า	
ขนาด			WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
			ก 598 มม. X ล 600 มม. X ส 844 มม.	
แรงดันน้ำ			50 kPa ~ 800 kPa	
ปริมาณน้ำ			56 ลิตร	
น้ำหนักสุทธิ			WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
			70 กก.	
ความจุในการซักและการปั่นหมาด			7.0 กก. [ผ้าแห้ง]	
ความจุในการอบแห้ง			3.5 กก.	
การใช้พลังงานไฟฟ้า	รุ่น		WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
	ขณะซัก		220 โวลต์	150 วัตต์
			240 โวลต์	150 วัตต์
	ซักและอบร้อน		220 โวลต์	2000 วัตต์
			240 โวลต์	2400 วัตต์
	การอบแห้ง		230 โวลต์	1600 วัตต์
	ปั่นหมาด	รุ่น	WD8704CJ/ WD8704DJ/ WD8704HJ	WD8702CJ/ WD8702DJ/ WD8702HJ
		230 โวลต์	300 วัตต์	250 วัตต์
	ปั๊ม		34 วัตต์	
น้ำหนัก บรรจุภัณฑ์	รุ่น		WD8704CJ/WD8704DJ/WD8704HJ WD8702CJ/WD8702DJ/WD8702HJ	
	กระดาษ		2.5 กก.	
	พลาสติก		2.5 กก.	
การหมุนปั่นหมาด	รุ่น		WD8704CJ/ WD8704DJ/ WD8704HJ	WD8702CJ/ WD8702DJ/ WD8702HJ
	รอบต่อนาที		1400	1200

ลักษณะและข้อมูลจำเพาะของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบล่วงหน้า

WD8704DJ-02696G_TH_CS3.indd 37 2009-12-29 12:09:26

บันทึก

บันทึก

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th

รหัส DC68-02696G_TH